




Wireless Microphone & HiFi Speaker - Q7

Photographs	01
Instructions	02
FAQs	03
How to charge	04
Specifications	05
Service Description	06

01. Photograph

1. Structure

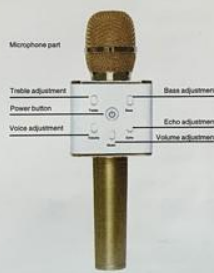

02. Front view



system switch
(when recording)

Standard accessories



03. Instructions


How to use

1. Switch on/off: press the power button, the blue light will on/off.
2. Bluetooth connection: turn on bluetooth on your mobile phone, and search the bluetooth name "Q7", click and paired, the device will tick sound/voice pairing process to enter a password, enter 0000.
3. Playing music: turn on mobile phone music app such as kugou, download your favorite songs or accompaniment songs, volume could be adjusted by cellphone.
4. Adjusting sound: adjust voice volume or echo in suitable place.
5. Start singing and have fun!

How to record

1. Connect the audio cable, plug the micro USB port into pocket KTV and 3.5mm audio port into cellphone.

As picture below

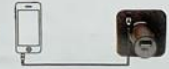

2. open recording app like KUGOU and follow the using process, start recording.
- P.S bluetooth will automatically disconnect when audio cable plug in.

04. FAQs

Status	Reasons	Solutions
LED does not light	low power or charging cable not plugged in	charge or check the charging cable
microphone not working	not turned on or the voice volume not adjusted	switch on or adjust the voice volume
No Reverberation	ECH key not adjusted	adjust ECH in a suitable place
Presence of noise	Environmental noise or mobile phone signal interference	Adjust the distance between microphone and cellphone
Some types of mobile phone recording effect is poor	Phone does not match Phone chip, processing ability that is weak	Replace the phone to try again or replace the phone
When playing music, electronic appears	Closest sounder connection phone and device	Close to mobile phone, keep away from cellphone
Accompaniment sounds weak or no sound	Mobile phone volume low or music file quality bad	Higher phone volume, download high-quality music
Bluetooth cannot paired	Reset Bluetooth controller or already paired with other phone	Get close to phone or disconnect with other phone
Sound distortion when playing music	Volume too high, battery power is low	Lower phone volume, charge battery
phone cannot use Bluetooth recording	IOS system does not support Bluetooth output	Try android phones or other singing apps

05. How to charge

1. When the battery voltage is too low, the product will automatically shutdown.
2. Using USB cable to connect with mobile phone standard jack. The red light will light.
3. Normal charging 2 hours, charging is completed, the red light is automatically extinguished.
4. Normal conditions works 8-6 hours.

06. Specifications

Microphone : capacitance
Output power: 3Wx2 (speaker output)
Frequency range: 100Hz-1500Hz
Maximum sound pressure level: >115dB 1KHz THE+1%
Reverb mode: echo sound reverberation
Power supply: built-in Li-ion battery
Battery capacity: 2600 mAh
Charging voltage: DC5V

07. Service Description

Dear users, thank you very much for using our products, in order to effectively protect your interests, sales agents and companies should clear commitment to product repair, replacement, return (refund/return bag) responsibilities and obligations, please read the following items:

1. "warranty card" is our company to provide free service warranty on its products necessary credentials.
2. in accordance with the principle of who is who is responsible for selling these bags of products, such as quality problems with the "Warranty Card" and the dealer, the dealer to provide services to customers, our company is the dealer service support.
3. the company promised, date of sale date to the effective date of the bill, the same below from quality problems within seven days, the customer can choose to return, replacement or repair; from the date of sale 8-15 days after emergence quality problems, customers can choose to replace and maintenance; from the date of sale, quality problems within a year, customers can free maintenance, over the warranty product quality problems to enjoy the long maintenance (only charge for each service point component materials fee), please customers buy the auto fill good "warranty card".
4. the following circumstances do not enjoy Warranty Services:
(1) more than three packs of period
(2) failure to require the use of the product manual, maintenance, custody and damage caused,
(3) not commitment to three packs of the split member of damage,
(4) no "warranty card",
(5) Content and Product "warranty card" does not match the physical consequences or altered,
(6) damage caused by force majeure,
5. the final interpretation of the above matters belong to the Company

Warranty Card

Product number: _____

Date of purchase: _____

Agency: _____

Invoice Date: _____

TEL: _____

Client's full name: _____

Postal Code: _____

