

- For ironing without steam, follow the instruction in section "steam ironing", however, the steam control turning knob should remain in position "O" (no steam).
- HOW TO CLEAN AND STORE**
- After using, lift the iron with the filling hole downwards to empty the remaining water from the Water tank.
 - Insert the plug into the socket, and set the Temperature Control Dial to "MAX" for 1-2 minutes to evaporate the remaining water, and then unplug the iron and let it cool down before storing it.

SELF-CLEANING

The iron need to be self-cleaned every 10-15 days:

- Push the steam control turning knob (C) to "O" position.
- Set the temperature control dial (I) in "MAX" position and plug the power plug till the pilot light (G) lighted up.
- Unplug the power plug, and hold the iron above a laver immediately.
- Hold the self-cleaning button (L), the water will drip down from the steam spray holes in the soleplate.
- After the water tank is empty and no more water drip down, put the iron on the shelf till it is dry.

ATTENTION:

When the plug connecting with the power socket, the user is not allowed to leave.

When the power cord is damaged, contact your dealers or an authorized service center for repair.

In case of any repairs, replacement of cord or plug, or adjustment, please consult a qualified technician, or take appliance to an authorized service facility.

Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



DOMOTEC®

Steam Iron Operating Instruction




Model No.:MS 2258
220-240V~50/60Hz 3000W

For household use only
Before operating this iron, please read this instruction manual carefully

Instruction Manual

Please read this instruction manual carefully and familiarize yourself with your new steam iron. Before using the first time, please retain this manual for future reference.

Know your Iron

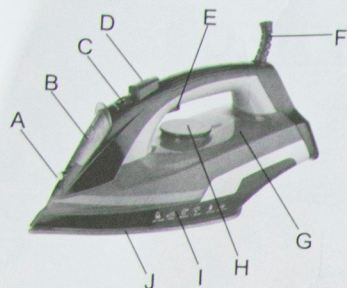

- A. Spray Nozzle
- B. Water filling inlet
- C. Steam control turning knob
- D. Spray button
- E. Burst Button
- F. Powercord protector
- G. Watertank
- H. Temperature control dial
- I. Skirt
- J. Soleplate

IMPORTANT SAFEGUARDS

When using your iron, basic safety precautions should always be followed:

- Make sure the power used corresponds with the one indicated on the rating label.
- Use the iron only for needed use as described in the instruction manual.
- Close supervision is necessary when any appliance is used near children. Do not leave iron unattended while connected or on an ironing board. Burns can occur from touching hot metal parts, hot water or steam.
- Keep the iron out of reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The iron should never be left unattended while it is connected to the mains supply.
- The plug must be removed from the sock-outlet before the water reservoir is filled with water.**
- Unplug the iron from the mains electrical supply before:
 - Cleaning
 - Filling with water or emptying the water tank
 - Immediately after use
- Never operate the iron with damaged power cord or plug, or after it has fallen or been damaged in any way. To avoid the risk of electric shock, do not disassemble the iron, take it to a qualified serviceman for examination and repair.
- Do not let cord touch hot surfaces.
- To protect against a risk of electric hazards, do not immerse the iron in water or any other liquid.
- The iron must be used and rested on a stable surface.**
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.**

BEFORE FIRST USE

- It is normal for small amount of smoke to be produced the first time, this will quickly disappear.
- When using the steam function for the first time, do not direct the steam towards the laundry as there could be debris from the steam vents.

FILLING WITH WATER

- We recommend the use of distilled water.
- Make sure that both the Steam Control turning Knob and Temperature Control Dial are in "OFF" position.
- Hold the iron upright so that the water-filling inlet is in a horizontal position.
- Fill with water through Water Filling Inlet until the water reach the "MAX" mark indicated on the side of the iron, and never fill above this mark.

SETTING TEMPERATURE

Follow the ironing instructions on the garment label. If there is no instruction but you do know the kind of fabric, please consult the following table.

Note: If the fabric consists of various kinds of fabrics, always select the temperature required by the most delicate fabrics.

Fabric	Temperature control	Temperature requirement
Synthetic	•	Low temperature
Silk, wool	••	Medium temperature
Cotton, linen	•••	High temperature

- Rotate the temperature control dial to corresponding position.

STEAM IRONING

- Place the iron in a vertical position and set the temperature control dial at the minimum/low heat setting.
- Insert the plug into the socket, and then turn the temperature control dial to the "high heat" marking. The pilot light will come on, indicating that the iron is heating up.
- When the pilot light turns off, the set temperature has been reached and the iron is ready to use.
- During ironing, the pilot light on the iron automatically switches on/off as the thermostat maintains the set temperature (you may continue ironing during this process).
- Turn the steam control turning knob to the required position.
- Steam is produced as soon as the iron is held horizontally.

SPRAYING

- Press the spray button to spray water on clothes, as often as required.
- Note: When using the water spray function, ensure that there is enough water in the water tank, and you may have to pump the spray button several times at first time you use the iron in order to start the spraying function.

BURST OR VERTICAL STEAM IRONING

- Press the burst of Steam button to generate a powerful burst of steam that can penetrate the fabrics and smooth the most difficult and tough creases. Wait for a few seconds before pressing again.
- By pressing the Burst of Steam Button at intervals you can also iron vertically (curtain, hung garments, etc.)

Note: The burst steam function can only be used at high temperature. Stop the emission when the pilot light turns on, then start ironing again only after the pilot light has turned off.