

INSTRUCTION MANUAL HAIRDRYER

The appliance may only be operated on an electricity supply which corresponds to the voltage and type of current specified on the housing. (See rating plate).

Caution:

- ◆ Never use your hairdryer in the bath, under a shower or over a washbasin full of water.
- ◆ If however the appliance should fall into the water, pull the power plug out of the power socket immediately!
- ◆ In that case, never place your hand in the water!
- ◆ Have your appliance checked by a qualified electrician before using it again.
- ◆ Do not direct aerosols or water spray into your appliance! Ensure that your appliance does not get wet (water splashing, etc) and do not use it with wet hands. If you put your appliance down whilst drying your hair, always switch it off as a precaution.
- ◆ The air outlet grill will inevitably become hot during use.
- ◆ Do not allow the cord to come into contact with the air outlet during use.
- ◆ Please check the cord for damage from time to time! In the event of any necessary repair, including replacement of the mains lead, your appliance should be sent to the specialist retailer/since the use of special tools is necessary) from whom your hairdryer was acquired.
- ◆ Children do not realize the dangers arising from improper use of electrical appliances. Children should therefore not be allowed to use a hairdryer without supervision.
- ◆ Please read these operating instructions carefully and explain all necessary precautions to your children.
- ◆ The air inlet and outlet openings should never be obstructed.
- ◆ If however, the airflow is inadvertently obstructed during use, the built-in thermal safety.
- ◆ Cut-off will automatically switch off the appliance. The hairdryer will switch on again automatically after cooling down for a few minutes.
- ◆ Always unplugged your appliance after use and before cleaning it!
- ◆ The safety grill tatted in the air inlet opening prevents hair from being drawn in.
- ◆ If the grill becomes clogged, it should be cleaned (e.g. with vacuum cleaner or brush)
- ◆ Otherwise the airflow will be obstructed to such an extent that the thermal cut-off will be activated.
- ◆ Keep your hair away from the immediate vicinity of the air inlet opening.
- ◆ Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the use at serious risk.

INSTRUCTIONS FOR USE:

Your washed hair should be normally dried it, by a normal hairdryer, but the hair should remain damp and moisture.

When the hair is dry; slightly dampen it with water.

Before styling, brush or comb your hair to ensure that it is entangled.

Prevent the hair from becoming too dry: this may result in frizzy hair which is hard to style.

Depending on your own views and ideas you can curl your hair by turning the brush in the desired direction.

Handling:

With the handy sliding-swathe the heating and fan capacity can be matched to your individual requirements.

The following settings are possible:

off = off

☼ = medium airflow

☼☼ = medium temperature

Gentle drying/styling of slightly damp hair.

☼☼☼ = strong airflow

☼☼☼☼ = higher temperature

Fast drying and/or styling.