


LOW BACK FRONT SEAT COVER WITH DETACHABLE HEADREST



Remove headrest and install the front cover.



Cover seat part and pull flap through middle crevice. Fix by elastic loops and hooks.

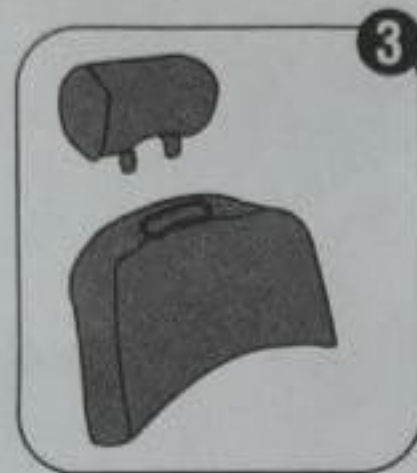


Cover headrest and insert back to the seat.

HIGH BACK FRONT SEAT COVER WITH NON-DETACHABLE HEADREST



Slide cover over from top to bottom.

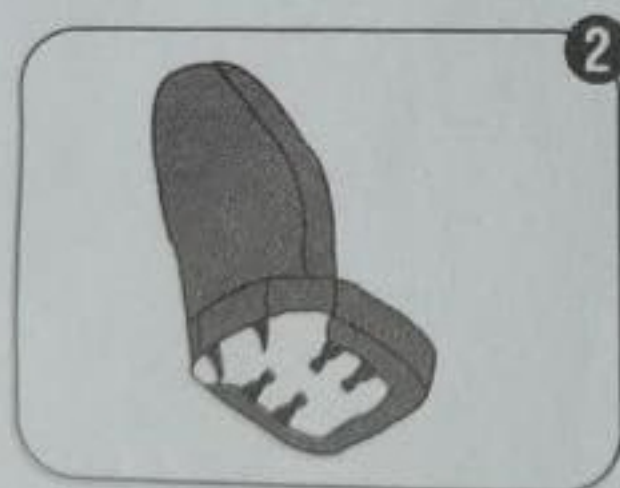

Cover seat part pull flap through middle crevice. Fix by elastic loops and hooks.

REAR BACK COVER



Install rear back cover.



Pull skirt through middle crevice. Fix by elastic loops and hooks. Use rope as you need.

REAR SEAT COVER



Install rear seat cover.



Pull skirt through middle crevice. Fix by elastic loops and hooks.

REAR BACK AND SEAT WITH HEADREST

Cover the headrest and insert back by cutting a cross for headrest and seat belt as you need.

