

# INSTRUCTION MANUAL for HOT AIR BRUSH

## Type designation:


AB-612A, AB-612B, AB-612AF, AB-612BF

## Ratings:

220-240V~ 50/60Hz Class II

800W for AB-612A, AB-612AF;

1000W for AB-612B, AB-612BF;

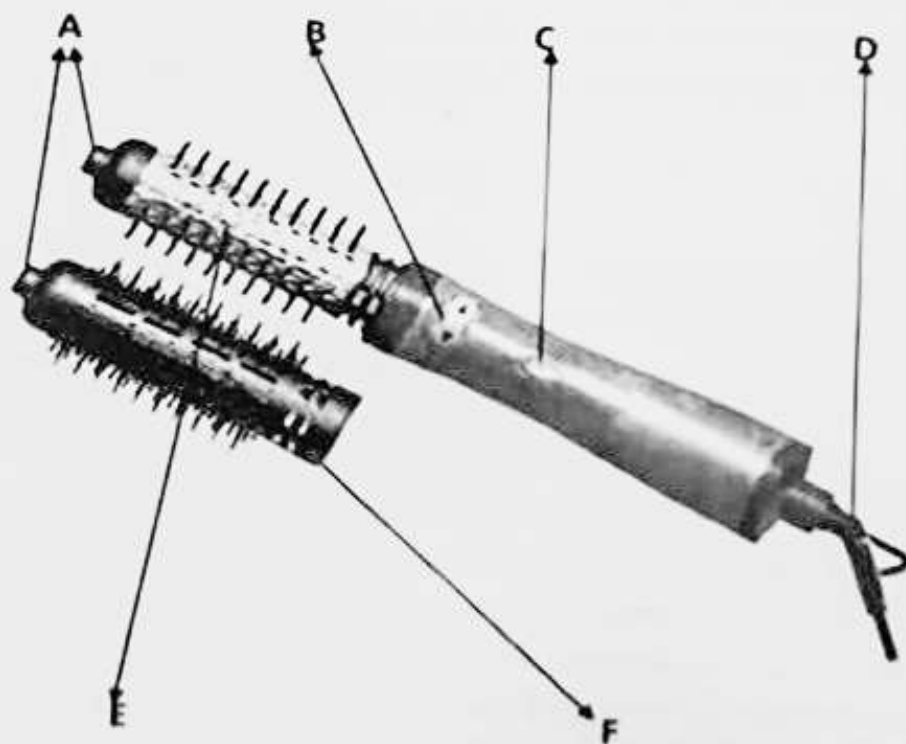

A Button for accessory

B Rotation button

C Power button

D Swivel power cord

E 38mm AL tube brush

F 38mm brush

## Dear Customer

Please read this user manual carefully before using your air style, paying particular attention to the safety notes on this and the following page! Keep the user manual safe for future reference and also to pass on to any subsequent owner.

### Air style

It has 2 interchangeable accessories to style your hair easily, it is powerful enough to dry your hair, at the same time it styles.

### Changing accessories

Fitting:

-Push the button(A) and place the accessory you wish into the unit until you hear a click.

Removing the bursh:

-Push the button(A) and remove the accessory you require from its recess.

Reminder:

The brush accessory(E/F) is very hot when in use. Be careful when removing it.

### 38mm AL tube brush (E)

The brush let you dry and style your hair at the same time,giving a perfect result both at the from and at the back of your hairstyle.It has rotational function,especially designed so that you can blow dry your hair effortlessly and in a single move-quicker and easier than traditional blow drying.

### 38mm Brush(F)

The brush let you dry and style your hair at the same time,giving a perfect result both at the from and at the back of your hairstyle.It has rotational function,especially designed so that you can blow dry your hair effortlessly and in a single move-quicker and easier than traditional blow drying.

## SAFETY CAUTIONS:

1. Do not block the air intake or outlet areas during use. Blocking the air flow can result in overheating which may cause burns or mechanical damage. Rolling too large a bunch of hair around the brush will not allow proper curling and also block the air outlet
2. If the air intake is blocked by the hand during use, for example, the thermal switch may function and turn off the device. This does not mean the device has been damaged and it should shortly return to normal. However, repetition of this sequence can result in damage.
3. When the styler is switched on, do not leave it near bedding, paper or other combustible objects. Also, do not use the styler near gas or other highly combustible items.
4. Avoid dropping or subjecting the device to excessive shock. Do not pull the cord with unnecessary force.
5. After use, switch the styler off then unplug the cord from the receptacle.
6. Wipe the housing clean with neutral detergent. Do not use thinner or benzine. Do not directly apply hair oils or lotions to the brush or comb. (Indirect contact from the hair is permissible.)

7. Do not store near such cosmetics as they may deform the housing, comb and brush.
8. Do not use in a bath area or with wet hands. Do not store in a damp area.
9. If damage occurs during use, the motor does not function properly, the warm air flow stops, or other abnormality occurs, cut off the power supply immediately and have the device repaired by an authorized repairman. Do not tamper with the inner mechanism.
10. For additional protection, the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electric circuit supplying the bathroom. Ask your installer for advice.
11. When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
12. WARNING



Do not use this appliance near bathtubs, basins or other vessels containing water

13. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
14. Children should be supervised to ensure that they do not play with the appliance.
15. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
16. While using the appliance, keep your hair away from the air inlets.

## The ion technology:

Your appliance automatically emits negative ions to eliminate static electricity.You hair will shine and be easier to untangle.

## Direction of rotation:

This function enables you to automatically wind the section of hair around the brush to blow dry your hair effortlessly.

- To start rotation,press the rotation button(B) in the desired direction of rotation(right or left).
- Keep pressing the switch while blow drying.
- To stop rotation,release the rotation button(B).

## Switch setting

- 0 = off
- C = cool
- 1 = warm
- 2 = hot

## CLEANING AND CARE