

We thank you very much for purchasing our electric kettle. This series of electric kettles are fashionable and beautiful in appearance, and boil water quickly and save energy. It will bring more convenience and fun to your life and work. In order to use you can enjoy the superiority of this series of electric kettles from the beginning

For the safety of functions, please read this manual carefully before use and keep it for future reference.

Important Points to Note

Before use


1. Boil half pot of boiling water before the first use to remove the peculiar smell caused by heating the protective film of the heating plate at the bottom.
2. The length of the external leakage power line is less than 70cm. Please do not lengthen the power line at will, or there may be a danger of tripping over the power line and causing boiling water and scalding. Keep the electric kettle close to the wall or in a safe place. The electric kettle had better not be placed near the edge of the table, workbench and other similar shelves, so as not to be knocked down; When suspending the wires, avoid touching or tripping people, or even getting scalded by boiling water.
3. Before use, please check whether the voltage used is consistent with the rated voltage of the electric kettle. If it does not match, do not use it, and immediately contact the point of purchase or the after-sales service of the manufacturer.
4. If the power cord is damaged or the chassis is damaged, in order to avoid danger, it must be replaced by the manufacturer and professionals in its maintenance department.
5. When adding water, cleaning or no longer using, please turn off the electric kettle switch and unplug.
6. Do not exceed the maximum water level line when filling water, otherwise overflow, splashing, electric leakage, etc. may occur; do not fall below the minimum water level line, otherwise it may cause dry burning, causing fire and other accidents.
7. This product must be used with the base provided by our company.
8. This product is only used for boiling water. It is forbidden to cook Chinese medicine, porridge, milk, eggs, soya-bean milk and other foods that are easy to stick to the bottom to avoid danger

In the use

1. In order to avoid burns, please make sure the lid is closed before use.
2. Please use this product at the horizontal level to prevent boiling water from escaping; If the kettle is too full, the boiling water may spout.
3. Do not let children approach when using this product. Adults must keep a close watch on children to avoid burns and electric shocks.
4. When the water is boiling, do not open the lid, the temperature of the water vapor is extremely high, and avoid touching the body and the mouth of the pot with your hands or other parts of the body to avoid burns.

Product parts name

Capacity	2.2L
Rated power	2000W
Rated voltage	50-60Hz
Structure type	I
Voltage range	220V

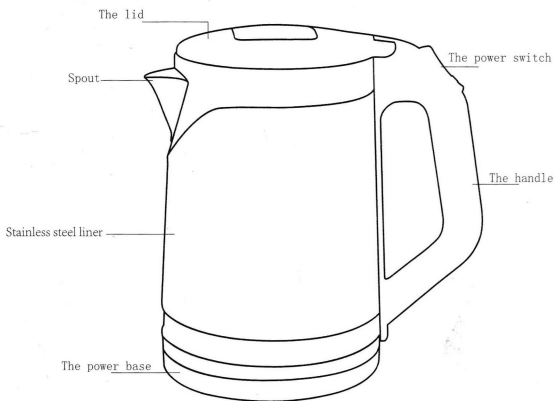


Directions for use

1. Confirm whether the power used is consistent with the technical indicators indicated on the nameplate of the power kettle, and use the standard AC socket.
2. When injecting water into the kettle, the water level shall not be lower than the minimum water level (MIN stands for the minimum water level), so as to prevent elements from being in dry burning state, and shall not be higher than the maximum water level (MAX stands for maximum water level). Avoid overfilling the kettle with boiling water.
3. Place the kettle on the base smoothly (you can put it in 360 degrees) and cover the kettle well; Put the power plug on the seat, turn on the power, and then the electric kettle is in the state of boiling water.
4. Heat and boil water; Press the power switch, and then the LED indicator lights up, indicating that the electric kettle heats the water inside the kettle. When the water boils, the electric kettle will automatically cut off the power and the power indicator will go out, indicating that the electric kettle stops working.



360 DEGREE ROTATION AUTOMATIC CORDLESS KETTLE

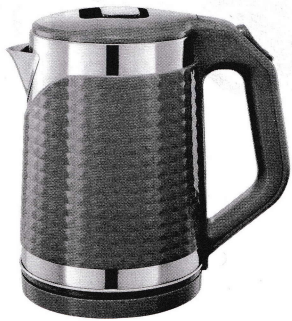

BT-3118
CAPACITY: 2.2L
Made in China

USER MANUAL

Before operating this unit, please read the instruction completely.

5. Do not touch the body of the kettle or move the electric kettle during heating to avoid scalding; Do not put this product in any liquid to avoid electric shock.
6. Do not place the electric kettle on a hot stove or similar object to avoid danger.
7. Please do not let the electric kettle dry to avoid fire

After use

When cleaning the electric kettle, please unplug the power supply. After cleaning, wipe the water on the electric kettle base and the power supply base clean. The appliance shall not get into the water during cleaning.

Precautions

1. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
2. Children being supervised not to play with the appliance.
3. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
4. The instructions for appliances normally cleaned after use, and not intended to be immersed in water for cleaning, shall state that the appliance must not be immersed.
5. if the kettle is overfilled, boiling water may be ejected.
6. the appliance is only to be used with the stand provided.
7. CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

Caveat

1. CAUTION: Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is switched on.
2. CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

Child attention

1. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
2. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
3. Children shall not play with the appliance.