

Karaoke Treasure Instructions

I. Buttons Operation

1. REC
Record
2. ⏮/V+
Short press for next song, Long for the volume increase;
Under selfie mode, press it to enable selfie function
(only for iOS system mobile phone)
3. ⏸
Play/Pause, Under FM state, hold it for automatic search.
4. 🎤
Short press: microphone switch.
5. ⏪/V-
Short press for prev song, Long for the volume decrease;
Under selfie mode, press it to enable selfie function
(only for Android system mobile phone)
6. ⏻/MODE
Hold(⏻): ON/OFF Press(Mode): Mode switching
7. REMIX VOL
+: The microphone volume increase.
-: The microphone volume decrease.
8. MIC VOL
+: The microphone volume increase.
-: The microphone volume decrease.
9. 🎧
The headset
10. USB
USB slot
11. TF
TF slot
12. DCSV/AUX/ANT
DCSV: Power slot;
AUX: Audio line in;
ANT: FM mode need to insert audio line ACTS as a radio antenna;

II. Wireless Karaoke

1. Supply power: Hold ⏻/MODE button to start the product.
2. Wireless connection: enable the wireless of mobile phone, click to connect, successful connection if prompt tone is produced.
3. Adjust sound: adjust the sound volume of mike and the reverberation to suitable level.
4. Start Karaoke.

III. Recording with mobile phone

1. Connect the recording wire; insert the MICRO plug of the recording wire into the MICRO interface of Karaoke Treasure, and the 3.5mm interface into the earphone jack of the mobile phone.
2. Open the Karaoke software in the mobile phone, such as: USING, Kugou Music or other recording APPs, select your favorable song, record the song according to the above mentioned singing method.
3. Test and save the song: operate according to the instructions of Karaoke software.

IV. Selfie function

1. Press the ⏻/MODE button to switch from wireless mode to selfie mode;
 2. Enable wireless in the mobile phone, search "shutter", click connection;
 3. Open the photograph interface of the mobile phone, press the "⏮/V+" or "⏪/V-" button to take photos.
- Note: 4.2.2 or higher version for Android system, 6.0 or higher version version for iOS system, it doesn't support other versions temporarily. It doesn't support the mobile phone which has the independent and solid photograph button.

Technical Parameters

Output Power: 3W Frequency Range: 100HZ~10KHZ
Max Sound Pressure Level: >115DB 1KHZ TDH<1%
Reverberation Mode: sound effect reverberation
Power Supply: Built-in 18650 Li-battery
Battery Capacity: 1800mAh
FM Radio: 87.5~108Hz

