

GEEMY®

HIGH TECHNOLOGY

GM403

Manual

Safety Instruction
CURLING WAND



M A K E L I F E B E T T E R



GEEMY®

MAKE LIFE BETTER

Manual

Safety Instruction

GM 403

UK ENGLISH

Curling wand

- Read all instructions carefully, even if you are familiar with the appliance.

 **WARNING!** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- When the wand is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the wand is switched off.

- For additional protection, the installation of a residual current device (RCD) having a rated residual


operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

- Never cover the product at any time.
- Do not drop the appliance into a tub or sink or any other liquids, should the appliance become wet then **UNPLUG IT IMMEDIATELY**.
- Do not spray aerosols or water into the appliance.
- Keep the power cord away from heated surfaces.
- Ensure the appliance does not get wet (water splashing, etc.) and do not use it with wet hands.
- Read these operating instructions carefully and explain all necessary precautions to your children before use.
- Always unplug the appliance after use and before cleaning it!
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always keep the appliance out of the reach of children.
- Never wrap the cord around the hot plates.

- Do not leave the product unattended whilst switched on.
- Do not place the wand on cabinet surfaces or near any flammable materials.
- Always unplug the appliance immediately after using it. When touching the wand on any area other than the handle, make sure the entire unit has cooled off.
- Never operate this appliance if it has been damaged or has a damaged cord or plug. If necessary, return the appliance to a service center for examination and repair.
- Children should be supervised to ensure that they do not play with the appliance.
- Please retain this instruction manual for further reference.

Know your appliance

1. Electro-plated Titanium floating plates
2. On-off switch
3. Temperature controls
4. Temperature display
5. Cool tip

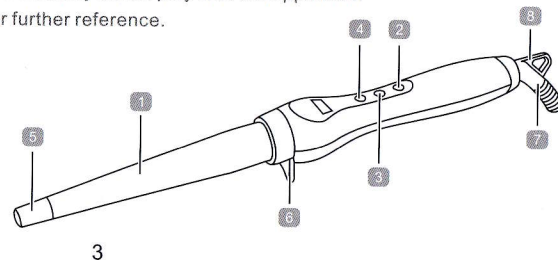

6. Stand
7. Hanging loop
8. Swivel cord

Product features

- High heat 80°C to 210°C
- Fast heat up - ready in 60 seconds.
- Adjustable +/- temperature controls, provides precise heat control to suit hair type and length.
- Please note, the highest temperature is not suitable for every hair type. Please select a temperature mode depending on your hair texture.
- Automatic safety shut off - This unit will switch itself off if no button is pressed or it is left on after 60 minutes.

Hair preparation

1. To obtain the best results, it is recommended that you visit a qualified hairdresser on a regular basis.

2. Using this wand will have a fantastic impact on the look of your hair.
3. Once you have washed your hair with shampoo, rinse your hair properly in cool water to gain maximum shine. Shampoo residue can make your hair look dull.
4. Pat your hair gently with towel to remove excess water, then rough-dry, paying close attention to the roots of the hair.
5. Use a wide toothed comb to remove tangles before styling.
6. Blow dry, brushing downwards.

Instructions for use

1. Before use, ensure the hair is clean, dry and tangle-free.
2. For extra protection use a heat protection spray.
- ★ Hairsprays contain flammable material-do not use while using this product.
3. Section the hair prior to styling. Style the lower layers first.
4. Plug the hair wand into suitable AC mains power supply. Press and hold the ON/OFF button to switch on.

5. Start styling on lower temperatures first. Select appropriate temperature for your hair type using the controls on the product. "+" increases the temperature, "-" decreases the temperature.

Recommended Temperatures:

Temperature	Hair Type
120°C - 180°C	Thin/Fine, damaged or bleached hair
180°C - 200°C	Normal, healthy hair
200°C - 210°C	Thick, very curly and difficult to style hair

Caution: The hottest temperatures should only be used by experienced stylists.

6. The temperature display will stop flashing once the desired temperature is reached, this will be about 60 seconds.
7. Hold the handle and wrap a section of hair around the heated barrel.
8. Wait about 10 seconds for curl to form.

9. Unwind the hair and release the curl.
10. Leave the hair to cool before styling.
11. Repeat this around the head to create as many curls as desired.
12. When finished, press and hold the ON/OFF button to turn off and unplug the appliance.

Cleaning

1. Before cleaning, allow the straightener to cool down and unplug the cord from the main power outlet.
2. Never immerse the unit, cord or plug into water.
3. Clean the unit after each use.
4. Simply wipe the exterior over with a damp cloth and then wipe dry.
5. Never use abrasive cleaners, brushes, gasoline, kerosene, glass/furniture polish or paint thinners to clean.
6. Take care when cleaning the ceramic plate to avoid making any scratches which will degrade the performance of the product.

Storage

1. If you do not want to use the appliance for a long period of time, please store it carefully.
2. Ensure that it is switched off and dry.
3. Store the appliance in a cool, dry place.
4. Make sure the appliance is kept out of reach of children.

Disposal information



Waste electrical products should not be disposed of with household waste.

Please recycle where facilities exist. Check with your local authority for recycling advice.

Connection to power

- Before connecting, check that the voltage indicated on the appliance corresponds with the mains voltage in your home. If this is not the case, consult your dealer and do not use.
- If the plug has to be changed because it is not suitable for your socket, or becomes damaged, the

appliance should be disconnected from the mains power supply. The plug should be cut off and an appropriate plug fitted following the wiring instructions. The removed plug must be disposed of safely as insertion into a mains socket is likely to cause an electrical hazard.

- This equipment must be disconnected from the mains when not in use. Do not allow this unit to be exposed to rain or moisture.

For your own safety read the following instructions carefully before attempting to connect this unit to the mains.

You should only plug the appliance into a 100V-240V AC supply. Connecting it to other power sources may damage the appliance.