 
 


PROFESSIONAL HAIR CLIPPER

8 HOURS CHARGE

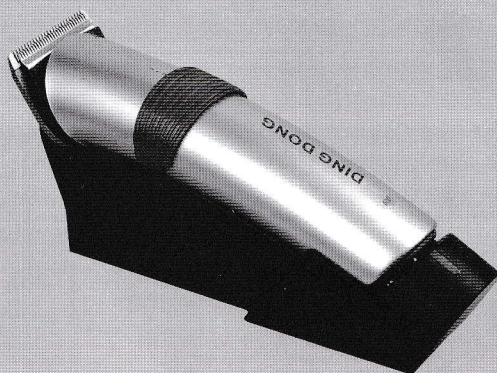

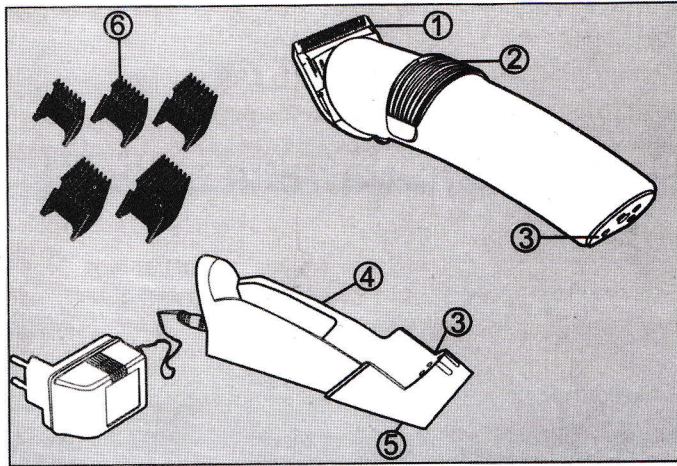

DESCRIPTION OF PARTS

1. Cutting head
2. On/off switch
3. Charging contacts
4. Charging stand
5. Control lamp
6. Clip on comb attachment

SWITCHING ON AND OFF



Cutting speed can be adjusted to two levels. Select Level 1 (slow) for fine work like cutting contours (e.g. around the ears), feathering and cutting fine or beard hair. Select Level 2 (fast) if you want to cut a lot of hair and/or thick hair.

- To switch on the appliance, push switch 1 forwards. Level 1 is in the central position, Level 2 forwards.
- To switch off the appliance, push the switch to position 0.

ADJUSTING CUTTING LENGTH



Cutting length can be adjusted to three levels;
1.0.5mm
2.1.5mm
3.2.5mm

Push sliding switch 3 into the desired position.

ACOMB ATTACHMENTS

 


Comb attachments in lengths 4, 8, 12, 16 and 20mm can be attached to be blade head.

Please note: the cutting length of the comb attachment and the cutting length set on the appliance are cumulative.

PREPARING FOR USE

- 1 The appliance as supplied by the manufacturer is not yet ready for use. It must be electrically charged prior to use.
- 2 Insert the plug of the battery charging stand 4 into a socket. Warning! This appliance must be charged at the specified voltage! You can store the remainder the charging stand 4 (220-240V 50/60Hz). In order to charge the appliance it should be placed in the battery charging stand 4 so that the control lamp 5 lights up. While the appliance is being charged, the switch must be set at "0" (the "0" must be visible). A charging period of 16 hours is required before initial use. Take care to keep the charging contacts 3 clean, as soiled charging contacts can interfere with the charging process.
- 3 After charging the appliance is ready for use. It can be used with or without the clip-on comb attachment. To attach the clip-on comb attachment, slide it onto the cutting head 1 until it clicks into position. The appliance must be switched off while the clip-on comb attachment is being attached or removed.
- 4 The clip-on comb attachment is easily adjustable. Simply slide it up or down the cutting head 1. The hair can be cut to 4 different lengths ranging from approximately 3 mm to 6 mm. The position of the clip-on comb attachment on the cutting head determines the length of the haircut.
- 5 After using the appliance, switch it off and replace it in the battery charging stand 4 to be recharged – the control lamp 5 must light up. In order to retain the load capacity of the storage battery we recommend to use the storage battery until it is empty before reloading.

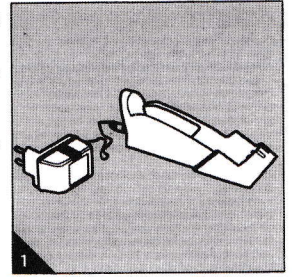

CLEANING AND CARE



To ensure that your clippers function perfectly and perform efficiently, clean and oil the appliance regularly.

Cleaning the blade head

If used regularly, blade head 2 should be thoroughly cleaned once a day.

- Switch off the appliance.
- Push the complete blade head forwards off the clippers.
- Remove hair with cleaning brush 14.
- Flip the top and bottom blades apart and remove hair between them with the brush or by blowing.



Oiling the blade head

The blade head should be oiled regularly – ideally daily.



Putting on the blade head

- Ensure that main switch 1 is in position "0".
- First position the bottom notches in the openings on the appliance, then press the blade on with an upward swivelling movement. Do not use force. The blade head should engage audibly.

CLEANING AND MAINTEN-ANCE OF THE APPLIANCE

Switch the appliance off before cleaning or carrying out maintenance!

In order to ensure that the appliance remains in perfect working order, it is important to note the following instructions. In order to retain the load capacity of the storage battery we recommend to use the storage battery until it is empty before reloading. Wipe the appliance with a cloth only (which may be slightly damp, if necessary). No solvents or lubricants may be used. After use, take off the clip-on comb attachment and remove any residual hair from the cutting head with a cleaning brush. In order to ensure good cutting results and a long life, it is important to oil the cutting head frequently.

PLEASE ALSO NOTE THE FOLLOWINGP

- During charging, the clipper should be placed in a position where there is no contact with moisture, water or other liquids possible.
- Never try to remove foreign bodies from the inside of the clipper with a pointed tool (e.g. tail comb).
- Always switch off the clipper before putting it down and between cutting operations.
- Protect the cable from damage. Do not pull the cable. If the cable should become damaged, contact the Service Department. The battery charging stand can be ordered as a spare part from the Service Department.
- Do not allow the cable to come into contact with hot surfaces.
- Do not touch the moving blades when the clipper is switched on.
- Do not use the clipper if the cutter set is damaged or broke, otherwise injuries could occur.
- The appliance should not be exposed to temperatures below 0°C or above +40°C for any great length of time. Avoid exposure to direct sunlight.
- Always turn the appliance off while it is being recharged (the "0" must be visible).
- Electrical appliances are not children's toys. Never allow a child to touch electrical equipment.
- If any problems or irregularities arise while the appliance is being used it must be switched off and the plug should be pulled out of the socket. Send the complete clipper with the adapter to the Service Department to be checked.
- Stubborn marks on the casing can be removed with a cloth moistened with normal household cleaning spirit. Beware inflammable! Never use petrol, paint thinners or abrasive cleaning agents.

The clipper is fitted with nickel-cadmium batteries, which have to be disposed of specially.

GUARANTEE

This appliance is guaranteed against defects for a period of half a year from purchase. During that period the purchaser is entitled to free-of-charge correction of any defect. This guarantee excludes defects caused by improper handling during use and normal wear and tear.

PLEASE ALSO NOTE THE FOLLOWING

This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. This appliance can be used by children aged from 8 years and above and persons with reduces physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision.

609
INPUT:220-240V~50/60Hz
OUTPUT:3V 300mA 3W

