

Geemy®

RECHARGEABLE SHAVER

Model:GM-7719



Fully washable
easy to clean every part



Long hair trimmer for
shaping beard,moustache
and sideburns.



Triple floating heads for
closer shaving




Double ring blades for
comfort and precision



MAKE LIFE BETTER

UK ENGLISH

● Names of parts

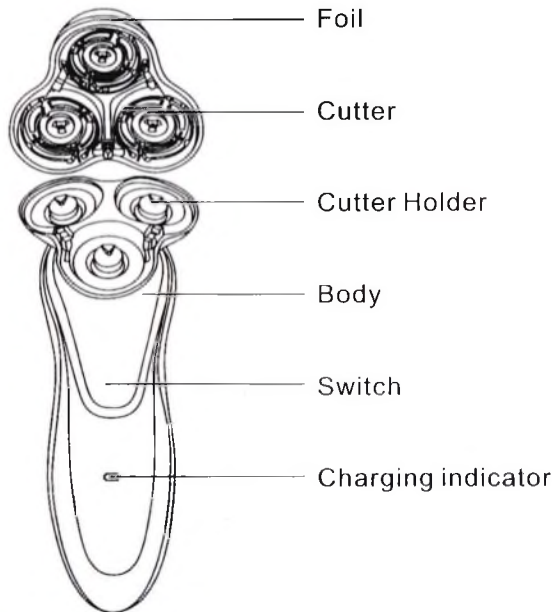


UK ENGLISH

● Charging

1. Push the switch down and close electrical power. The charging indicator is on, which shows that it is charging. After 8 hours, charging is over.
2. Charging power: 220-240V 50/60Hz 3W
3. Be sure the stored power is out completely before charging, which the battery can durable.
4. The shaver can be used for about 7 days after shaving.


● Accessories

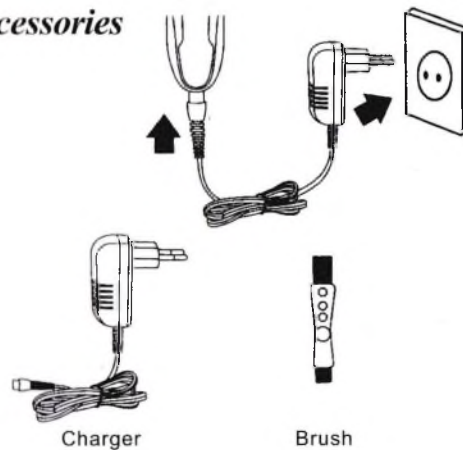

● Usage

1. Take off the shelter and push the switch up. Softly touch your skin and move in the contrary growth direction of beards slowly. If you stretch your skin tightly, you can obtain better effect. Once the shaving is over, push the switch down at once and cover it with the shelter.
2. Charging time can't exceed 20 hours or it affects the life of battery, even damages the line.

● Maintenance

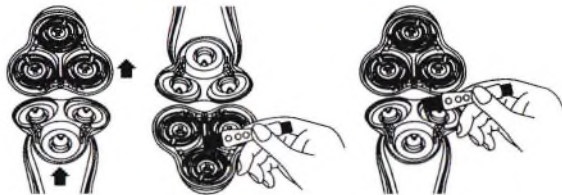

Push down the switch and take off the shelter. Rotate down the outer cutter in the counter-clockwise direction and take off the inner cutter. Clean the beards on the outer cutter, inner cutter and the body once a week. After cleaning, install the inner cutter and the outer cutter and cover it with the shelter.




- Don't press the net shelter.



- Don't forcibly open the net shelter with a screw driver

● Notes

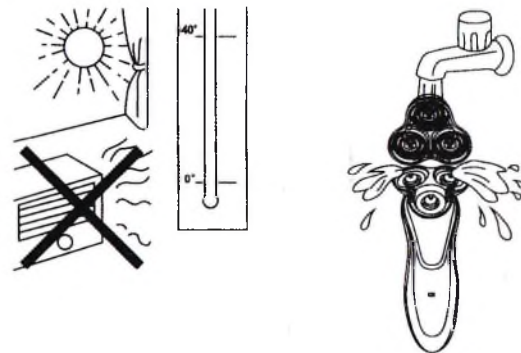


- This product cannot be used by physically distempered, sensorially or mentally disordered, or inexperienced persons (including children), unless they are under supervision or instruction by people in charge of their security.
- Take care of children to keep them away from this product.
- Clean the body with water or it occurs troubles.
- Don't charge or store in warm places, in the moisture or under direct sunlight.

● Usage

1. Take off the shelter and push the switch up. Softly touch your skin and move in the contrary growth direction of beards slowly. If you stretch your skin tightly, you can obtain better effect. Once the shaving is over, push the switch down at once and cover it with the shelter.
2. Charging time can't exceed 20 hours or it affects the life of battery, even damages the line.

● Maintenance

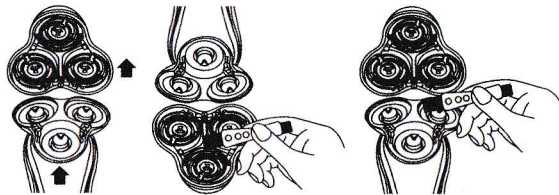

Push down the switch and take off the shelter. Rotate down the outer cutter in the counter-clockwise direction and take off the inner cutter. Clean the beards on the outer cutter, inner cutter and the body once a week. After cleaning, install the inner cutter and the outer cutter and cover it with the shelter.

 


- Don't press the net shelter.



- Don't forcibly open the net shelter with a screw driver

● Notes

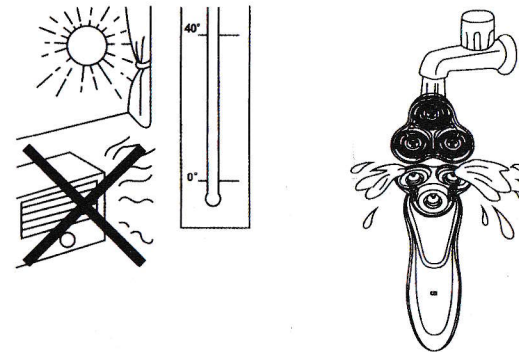

- This product cannot be used by physically distempered, sensorially or mentally disordered, or inexperienced persons (including children), unless they are under supervision or instruction by people in charge of their security.
- Take care of children to keep them away from this product.
- Clean the body with water or it occurs troubles.
- Don't charge or store in warm places, in the moisture or under direct sunlight.

● *Ricarica*

1. Spingere l'interruttore verso l'alto e chiudere l'alimentazione elettrica. L'indicatore di carica è acceso, che mostra che sta caricando. Dopo 8 ore, la carica è finita.
2. Potere di carica: 220-240V 50 / 60Hz 3W
3. Assicurarsi che la potenza memorizzata sia fuori completamente prima della ricarica, che la batteria può durare.
4. Il rasoio può essere usato per circa 7 giorni dopo la rasatura.

● *Accessori*

