

GB ENGLISH

SAFETY WARNINGS

This appliance may be used by children of more than 8 years of age, persons with physical, sensory or mental capabilities or inexperienced persons only if they have been previously trained in using it in a safe manner, and only if they have been informed of the dangers the product can cause.

Children may not play with the appliance. Children may not clean or carry out any maintenance on the appliance without adult supervision.



If you use the appliance in a bathroom, pull the plug out of the socket after use, because the presence of water is dangerous even when the appliance is switched off.

WARNING: do not use this appliance near baths, washbasins or other containers full of water!

For enhanced safety, it is recommended to install a differential circuit breaker with a nominal operating differential current that does not exceed 30mA (10mA is ideal) in the electric circuit of the bathroom. Ask your installer for advice. If the supply cord is damaged, it must be changed by manufacturer or by its service agent or by a qualified person in order to avoid an hazard.

GENERAL SAFETY INSTRUCTIONS

Before using this product, please read carefully this instruction manual. It is advisable to save these instructions for a future use.

Before connecting the appliance, check the voltage indicated on the appliance corresponds to the local mains voltage.

Always unplug the appliance: When it is not in use, When you attach accessories, Before cleaning it, In case of troubles.

Unplug the appliance, only after having switched it off. Never try to unplug the product pulling it from the cable or from the product itself.

Never wind the cord around the main body.

In order to protect children from risks of electrical shocks, never leave the appliance unattended when it is plugged in. Always store it out of their reach.

Do not try to repair the product by yourself but always address to authorized centers.

Keep the device and the cable away from heat, direct sunlight, moisture, sharp objects and similar ones.

Never leave the product unattended if switched on! Switch it off and unplug it when you do not use it, even if it is only for a while!

Use original accessories only.

When hair dryer is working, its air inlets and outlets must never be closed.


The product must not be absolutely plunged in water or other liquids or coming in contact with them! Never use the appliance with wet or moist hands.

In case the appliance becomes moist or wet , please unplug it immediately from the socket.

Attention: the nozzle and diffuser becomes hot during operation.

COMPONENTS THE HAIR DRYER

1. Concentrator
2. Cool shot button
3. Temperature switch
4. Air speed switch
5. Hanging loop
6. Removable rear filter
7. Diffuser

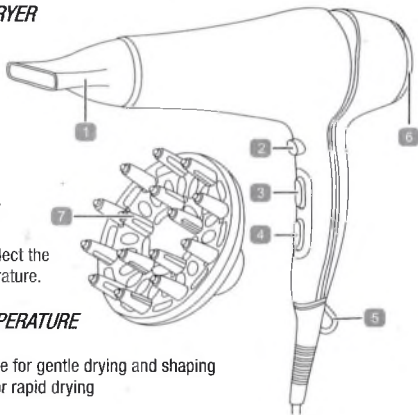

OPERATING INSTRUCTIONS

Fully unwind the cable.

Switch on the appliance and select the desired air intensity and temperature.

SELECT THE DESIRED TEMPERATURE

Position —: Low temperature

Position ≈: Medium temperature for gentle drying and shaping

Position ≡: High temperature for rapid drying

SELECT THE DESIRED BLOWING STRENGTH

- Position ○ : power OFF
Position ☼ : gentle intensity of air
Position ☼☼ : strong intensity of air

COOL SHOT BUTTON

 
By this switch it is possible to interrupt the heating process so that the air can be mixed according to individual requirements. Upon releasing this switch, the appliance will operate again at the preset temperature.

CONCENTRATOR AND DIFFUSER

The concentrator allows you to address the airflow straight to the locks for making easy your hair styling.

CLEANING THE FILTER

Remove the cover as indicated in the picture and if necessary, clean the ventilating filter using a wet cloth.



HANGING LOOP

After having used the appliance, it is possible to hang it by its hanging loop.

TECHNICAL FEATURES

- Motor: AC
- Power: 1800-2200W
- Power supply: 220-240V~ 50/60Hz
- Power cord length: 3m
- Cool shot
- Professional concentrator and diffuser

SYMBOL



Class II appliance



This item is made in conformity with CE



DISPOSAL

The device (including its removable parts and accessories) must not be disposed of together with municipal waste at the end of its life, but in compliance with European Directive 2012/19/EC. Since it must be handled separately from household waste, either carry it to a separately-collected waste disposal centre for electrical and electronic appliances or give it back to the retailer on purchasing a new device with the same purpose. Any infringement will be severely prosecuted.

Specifications and designs are based on the latest information available at the time of printing and subject to change without notice.