 
 



Maintenance

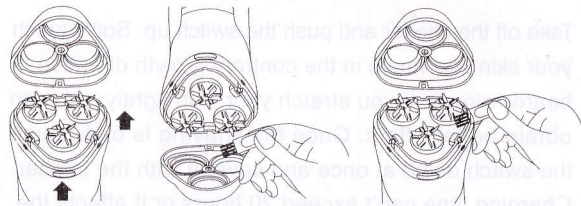

Push down the switch and take off the shelter. Rotate down the outer cutter in the counter-clockwise direction and take off the inner cutter. Clean the beards on the outer cutter, inner cutter and the body (1 time a week). After cleaning, install the inner cutter and the outer cutter and cover it with the shelter.

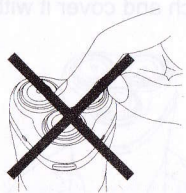


 ● Don't press the net shelter.

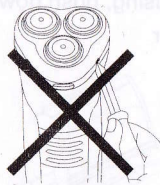

● Don't prize open the net shelter with a screw driver.

 Notes

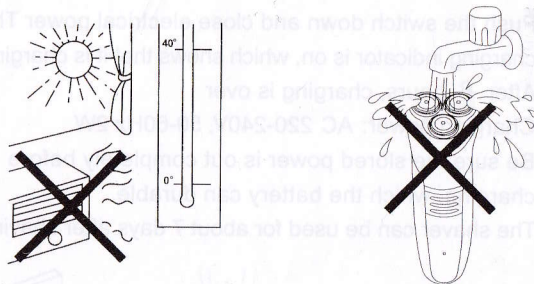

- This product cannot be used by physically distempered, sensorially or mentally disordered, or inexperienced persons (including children), unless they are under supervision or instruction by people in charge of their security.
- Take care of children to keep them away from this product.
- Don't clean the body with water or it occurs troubles.
- Don't charge or stroe near a warmer, near or in the moisture or in the direct sublight, for example in the car in summer

Geemy

RECHARGEABLE SHAVER

Model: GM-7300



Long hair trimmer for shaping beard, moustache and sideburns.



Rechargeable battery inside, the use of more convenient



Intelligent anti-clip system

 


Silver Pd alloy motor of high rotational speed




MAKE LIFE BETTER


● Names of parts



Cover

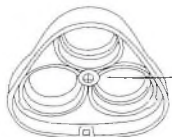 


Foil

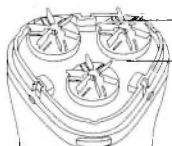 

Cutter

 Cutter Holder

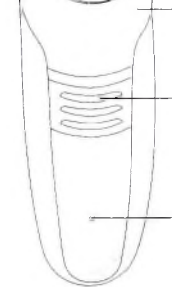


Body

Switch


Charging Indicator

● Charging

 1. Push the switch down and close electrical power The charging indicator is on, which shows that it is charging, After 8 hours, charging is over
2. Charging power: AC 220-240V, 50-60Hz 2W
3. Be sure the stored power is out completely before charging, which the battery can durable.
4. The shaver can be used for about 7 days after shaving.

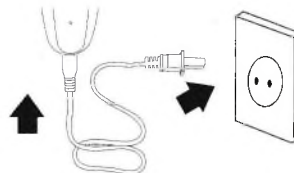

● Accessories

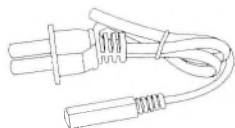 

wiring



brush

● Usage

1. Take off the shelter and push the switch up. Softly touch your skin and move in the contrary growth direction of beards slowly. If you stretch your skin tightly, you can obtain better effect. Once the shaving is over, push the switch down at once and cover it with the shelter
2. Charging time can't exceed 20 hours or it affects the life of battery, even damages the line.

Usage(trimmer):

1. Open the back cover and pull off the trimmer
2. Softly touch your skin in the right-angle direction with the trimmer and trim slowly.
3. After using, push down the switch and cover it with the shelter

