 


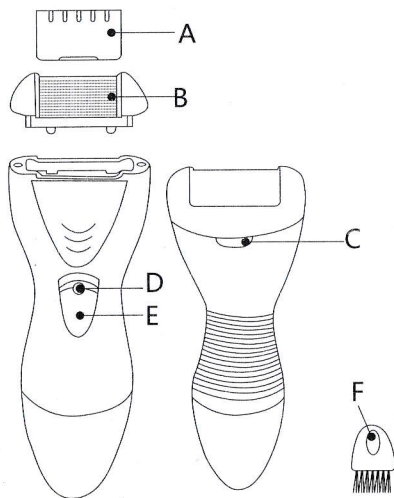

Product Components

- A: Protective cover
- B: Unique rollers/grinding head
- C: Release button
- D: Safety switch lock
- E: Slide On/Off switch
- F: Cleaning brush

 
 
Charging time: 8 hours
 Service time: 40 minutes
 Input: 110-240V, 50/60Hz
 Output: 5V, 600mA 3W

How to use

This callous remover is designed for smoothing coarse skin on the feet and heels. Do not use this device anywhere else on the body.

1. Wash and clean the skin and dry fully.
2. Make sure the Rollers Grinding Head is placed into the unit. See section of changing the Rollers Grinding Head on how to remove and replace head.
3. Remove the protective cover from the unit and it is ready to use.
4. Turn on the unit by pressing the safety switch sock, in the center of the On/Off switch, and at the same time push the switch up (Figure 1).

5. Gently rotate (back and forth or side to side) (Figure 2) the callous/corn/hard skin area for 2-3 seconds. Do not press hard-gently glide the unit over desire area The unit will stop if it is press too hard on the skin. Stop and check if you have achieved the softness you desire. If not, go over the area for 2-3 more seconds and check again. Continue to use this method until the level of smoothness is obtained.



Warning: stop using if skin becomes sore or inflamed.

Warning: Do not use on skin for more than 2-3 seconds at a time.

6. Turn the unit off (Figure 3).

7. Rinse the skin or use a wet towel to get rid of the excess dead particles.

8. To clean this Callous Remover, please see the Cleaning section.

9. Keep the protective cover on your unit when it is not in use.

Changing the rollers grinding head

Change the Rollers Grinding Head as needed for best result. The Rollers Grinding Head last for a few sessions depending on frequency of use and size of area being treated. Replace as needed. Make sure the unit is turned off before replacing the Rollers Grinding Head.

1. One hand hold the head, another hand press in the release button, on the back of the unit, the head will tack out (Figure 4 & 5).

2. Place a new Rollers Grinding Head into the unit until you hear a "click" sound. Be sure to insert the new head into the unit, it has been firmly installed. Changing the Rollers Grinding Head

Note: Do not turn your unit On if the Rollers Grinding head is not attached.



Epilation

Epilation is easier just after a bath or shower. Make sure your skin is completely dry when you start to epilate.

When you use the appliance for the first time, we advise you to try it out on an area with only light hair growth. This helps you get accustomed to the epilation process. For optimal epilating results, the hairs should not be longer than 10 mm.

To epilate longer hairs:

Shorten the hairs to maximum length of 10 mm with a trimmer. In this ease, you can start to epilate right away.

Epilating the underarms and bikini line

This makes the appliance ideal for epilating the more delicate areas of the body, such as the underarms and bikini line.

1. Switch on the appliance
2. Stretch the skin with your free hand
3. Place the appliance perpendicularly onto your skin, with the on/off slide pointing in the direction in which you are going to move the appliance.
4. Move the appliance slowly over the skin, against the
5. Direction of the hair growth.

Shaving

You can use the shaving head to shave sensitive body parts, such as your underarms and bikini line. With the shaving head, you obtain a smooth result in a comfortable and gentle way.

1. Press the release button and pull the epilating head off the appliance
2. Place the shaving head on the appliance and press it onto the appliance until it snaps home ("click")
3. Switch on the appliance.
4. Placing the shaving head onto your skin and move the appliance slowly and smoothly against the direction of hair growth.

How to cleaning

Note: Clean the appliance after each use to ensure better performance. This Callous Remover is water resistant, it can be rinsed under water for cleaning:

1. Remove the protective cover from the head.
2. Clean the Callous Remover with the cleaning brush. Do not switch the appliance on while brushing.
3. Rinse the unit under the tap. Sometime you can operate the unit, keep the head running for 5-10 seconds, that quick and high efficiency.
4. Turn the unit off.
5. Wipe the body of the unit with a clean dry cloth.
6. Replace the protective cover.

Storage

When the appliance is not in use, put it on a dry place that children cannot touch. Do not place the appliance in an area with excessive heat or moisture.