 


Geemy®

PROFESSIONAL HAIR CLIPPER

Model:GM-6005

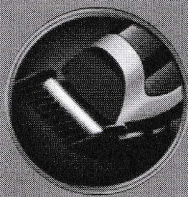 


Manuale

Safety Instruction

RECHARGEABLE

HAIR CLIPPER


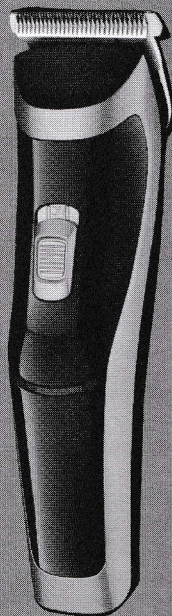


MAKE LIFE BETTER

UK ENGLISH

General descriptions

  1. Blade
2. On/off switch
3. Charging indicator
4. Adaptor
5. Guide comb

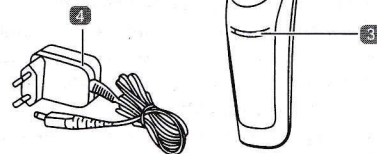

Preparing for use

1. The appliance as supplied by the manufacturer is not yet ready for use. it must be electrically charged prior to use.
2. Insert the charging wire into a socket. warning! this appliance must be charged at the specified voltage

UK ENGLISH

(220-240V 50/60Hz). While the appliance is being charged, the switch must be set at "0". A charging period of 12 hours is required before initial use. Overcharging of the appliance is not possible.

3. After charging the appliance is ready for use. It can be used with or without the guide comb attachment. To attach the guide comb attachment, slide it onto the cutting head until it clicks into position. The appliance must be switched off while the guide comb is being attached or removed.

4. There are 4 pcs guide combs. The hair can be cut to 4 different lengths ranging from approximately 3mm to 12mm.

 
5. After using the appliance, switch it off and replace it from the charging stand. In order to retain the load capacity of the storage battery we recommend to use the storage battery until it is empty before reloading.

Replacing the cutting head

- Switch the appliance off before replacing the cutting head!
- If the performance of the appliance deteriorates after extended use, despite regular cleaning and maintenance, the cutting head should be replaced. First remove the hexagonal screw on the cutting head

UK ENGLISH

by means of the hexagonal spanner attached to the charging stand and remove the old cutting head. important: first remove the screw, then remove the cutting head! Place the new cutting head on the main body of the appliance and screw on place with the spanner.



Cleaning and maintenance of the appliance

- Switch the appliance off before cleaning or carrying out maintenance!
- In order to ensure that the appliance remains in perfect working order, it is important to note the following instructions:
- In order to retain the load capacity of the storage battery we recommend to use the storage battery until it is empty before reloading.