


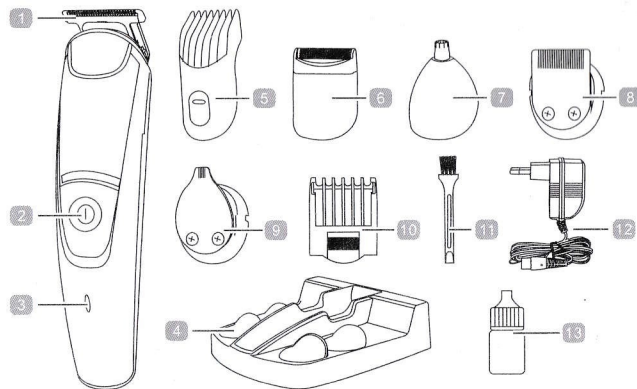

COMPONENTS OF HAIR TRIMMER

1. T-blade
2. ON/OFF switch
3. Charging indicator
4. Storage base
5. Cutting guide(T-blade)
6. Shaver
7. Nose and ear trimmer
8. Beard trimmer
9. Precision trimmer
10. Cutting guide(beard trimmer)
11. Cleaning brush
12. Adapter
13. Oil

SAFETY WARNINGS

This appliance may be used by children of more than 8 years of age, persons with physical, sensory or mental capabilities or inexperienced persons only if they have been previously trained in using it in a safe manner, and only if they have been informed of the dangers the product can cause.

Children may not play with the appliance. Children may not clean or carry out any

maintenance on the appliance without adult supervision.

Do not use a damaged adapter and use only the adapter supplied.

If the adapter is damaged, always have it replaced with one of the original type in order to avoid a hazard.

GENERAL SAFETY INSTRUCTIONS

It is advisable to save these instructions for a future use.

Before connecting the appliance to the mains, please check if the voltage of your DC socket corresponds to the one stating in the rating label.

Always keep the appliance and its accessories away from heating sources.

When you store the product, it is advisable not to wind the cord round the appliance.

Never try to unplug the product pulling it from the cable or from the product itself.

In case of damages to the cable or to the product, it is necessary to stop immediately using the product and address to authorized centers.

Never try to repair the product by yourself. In case the appliance needs to be repaired, it is necessary to address to specialized and authorized centers, otherwise the warranty will expire. In order to avoid the product from possible overheating, it is advisable to unwind completely the cable and not to keep the product turned off it is not in use. Never put the appliance, once turned on, under blankets or cushions. In order to avoid possible risks and damages, it is advisable not to use the product for more than 30 minutes. After use, it is advisable to allow the appliance to cool down for any minutes and then it is possible to start using it again.

IMPORTANT

This clipper has a built-in rechargeable battery. Do not throw into fire, apply heat, or charge, use, or leave in a high temperature environment.

The appliance should not be used on animals.

OIL BOTTLE

Keep out of reach of children. Do not swallow. Do not apply to eyes. Dispose of properly when empty.

CUTTING GUIDES

By use of the 2 cutting guides provided, you can adjust the length of the trim up to a maximum of 21 mm (with the guide comb inserted).

The cutting lengths are as follows: with guide combs: from 12-21 mm. The length of the cut is shown on the guide comb.

With 10 trimming lengths from 12 mm-21 mm can touch up your haircut quick and convenient.

IMPORTANT:

The device must always be turned off when inserting or removing a cutting guide.

HOW TO USE

Note: this product is for cordless use only.

Switch the product on by pressing the on/off switch once for normal mode, again to turn off.

TO ATTACH AND REMOVE THE TRIMMING ATTACHMENTS

Note: Always ensure the groomer is switched off before changing any attachments.

To attach place the desired trimming head on top of the groomer.

ATTACHING AND REMOVING ADJUSTABLE COMB ON THE T-BLADE TRIMMER/BEARD TRIMMER

To attach line up the comb rails and slot on the groomer until firmly secured.

Pressing the adjustment button on the back of the comb will alter the cutting length increment, this is indicated on the comb.

To remove press and hold the adjustment button and push the comb up and off the groomer.

T-BLADE

For uniform cutting, allow the trimmer to cut its way through the hair. Do not force it through at a faster rate.

Select the desired length on the adjustable comb or select the desired guide combs. with guide combs: from 12-21 mm.

Start by combing the hair so it falls into its natural direction.

Place the largest guide comb onto your trimmer and start by trimming the sides from the bottom upwards. Hold the trimmer lightly against the hair, with teeth of the guide comb pointing up but flat against the head. Slowly lift the trimmer up and outward through the hair, cutting only a small amount at a time. Repeat around sides and back of head.

PRECISION TRIMMER

The precision trimmer attachment is great for create fine lines and define small details.

TO REMOVE HAIR FROM NOSE AND EAR

Attach the nose, ear, eyebrow attachment.

Insert the groomer's cutting unit gently into the nostril or ear.

Gently move the groomer in and out of the nostril or ear and at the same time rotate the groomer.

IMPORTANT: Avoid inserting the cutting unit more than 6 mm into your nostril.

TO TRIM EDGE OF BEARD OR MOUSTACHE

Attach the trimmer blade.

Select the desired length on the adjustable comb or select the desired guide combs. Hold the groomer with the cutting blade facing you.

Start with edge of beard/moustache line, and with the cutting blades resting lightly against your skin, use slow movements to create a beard/moustache line.

USING THE SHAVER

Hold the groomer so the mini foil shaver gently touches your face.

Use short, well-controlled movements to shave around your beard/moustache. Use your free hand to stretch your skin. This encourages the hair to stand upright, making it easier to shave.

REMOVING ADJUSTABLE COMB ON THE T-BLADE TRIMMER/ BEARD TRIMMER BLADE

To attach line up the comb rails and slot on the groomer until firmly secured.

Pressing the adjustment button on the back of the comb will alter the cutting length increment, this is indicated on the comb.

To remove press and hold the adjustment button and push the comb up and off the groomer.

CHARGING

Before connecting the appliance to the mains, please check if the voltage of your DC socket corresponds to the one stating in the rating label. It is possible to charge the appliance connecting it directly with socket. Once the charge has ended, disconnect the appliance from the socket. After every usage, you can store the appliance on its support.

The charging light goes out or change colour when the appliance is fully charged.

To use the hair clipper connected to the mains: switch the hair clipper off, connect it to the mains and wait a few seconds before switching it on.

CLEANING AND MAINTENANCE

Before starting cleaning the appliance, always switch it off and unplug it.

Clean the unit with a damp and soft cloth.

Never use detergents and solvents to clean the appliance.

After having used the appliance remove the cutting guide and using the cleaning brush to clean the body of the device, in order to remove any hair from the cutting blade.

In order to grant a long and good performance to the appliance, it is advisable to clean and oil often the appliance.

For an easy cleaning it is possible to remove the cutting blades.
Open the cutting unit by pushing it backwards .
Remove hair from the cutting blade using the cleaning brush, reassemble the cutting unit, put 2 or 3 oil drops and allow the machine to run for several seconds so that the unit can lubricate properly.

TECHNICAL FEATURES

- ON/OFF switch
- 2 cutting guides
- Complete charging time: 8 hours
- 60 minutes of continuous operation
- Power supply: 100-240V~ 50/60 Hz

SYMBOL



This item is made in conformity with all the applicable European directives



Class III appliance



DISPOSAL

The device (including its removable parts and accessories) must not be disposed of together with municipal waste at the end of its life, but in compliance with European Directive 2012/19/EC. Since it must be handled separately from household waste, either carry it to a separately-collected waste disposal centre for electrical and electronic appliances or give it back to the retailer on purchasing a new device with the same purpose. Any infringement will be severely prosecuted.

The built-in rechargeable battery contains substances that may pollute the environment. Always remove the battery before you discard and hand in the appliance at an official collection point. Dispose of the battery at an official collection point for batteries. First unplug the product and let the motor run until the battery is completely empty. Remove both side panels from the appliance with a screwdriver. Lift the power unit out of the appliance.