

DOMOTEC®

Instruction Manual

Hand blender



Model No: MS-5106

ART: 5606

AC220-240V 50Hz 800W



Attention please read this instruction manual carefully before you use this appliance and save it for future reference.

Danger:

- Never immerse the motor unit in water or any other liquid, nor rinse it under the tap, only use a moist cloth to clean the motor unit.

Safety

1. Close supervision is necessary when the appliance used near children.
2. Do not operate any appliance with damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact your customer service.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 4 switch off the appliance and disconnect it from the power if you leave it unattended and before you assemble, disassemble and clean it

General

- Take special care when preparing food for babies, the elderly and infirm. Always ensure that the hand blender shaft is thoroughly sterilized. Use a sterilizing solution in accordance with the sterilizing solution manufacturers instructions.
- Never touch the blades while the machine is plugged in.
- Keep fingers, hair, clothing and utensils away from moving parts.
- Unplug after use and before changing attachments.
- Never blend hot oil or fat.
- Don't let children or infirm people use the hand blender without supervision.
- Never used a damaged hand blender. Get it checked or repaired in your local place.
- Do not immerse unit, plug or cord in water, or allow for liquid to come in contact with any of the electrical parts
- Never operate the hand blender and chopper attachment with a damaged power cord or plug, or after it has fallen or been damaged in any manner. Handover the appliance to the nearest customer service centre for examination, repair or service
- Never let the cord touch hot surfaces or hang down where a child could grab it.
- Never use an unauthorized attachment.
- Young children should be supervised to ensure that they do not play with this appliance.

Chopper attachment

- Don't touch the sharp blades.
- Remove the chopper blade before emptying the bowl.
- Never remove the cover until the blade has completely stopped.

Important

- With heavy mixtures, don't use your hand blender for longer than 50 seconds in

any four minutes period-it'll overheat.

- Only use your hand blender for its intended domestic use.
- If the power cord is damaged, it must be replaced by customer service centre in order to avoid hazard.
- DO NOT MAKE HAND BLENDER RUN IN THE AIR

Before plugging in

- Made sure your electricity supply is the same as the one shown on the power handle.

Before using for the first time

1. Remove all packaging and throw away the blade covers.
2. Wash the parts: see 'cleaning'.

Know your hand blender

Hand blender

- ①② Switch buttons
- ③ Power handle
- ④ Blender shaft (removable)


Whisk

- ⑤ Whisk collar
- ⑥ Whisk beater

beaker⑦

Chopper

- ⑧ Chopper lid
- ⑨ Blade
- ⑩ Chopper bowl

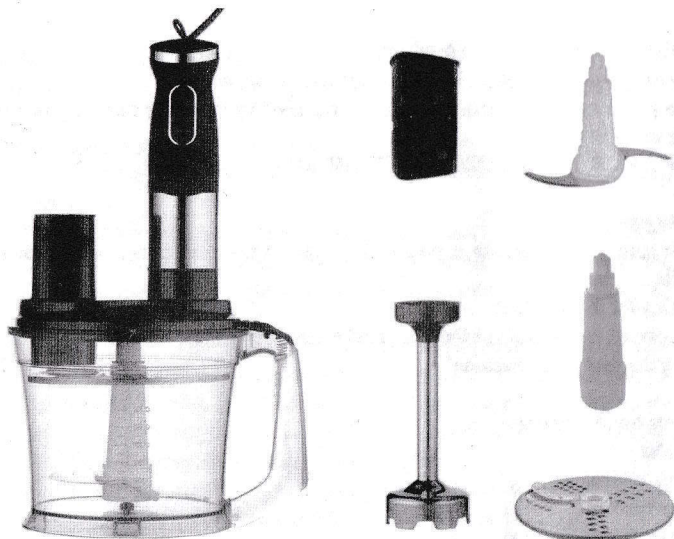

To use the hand blender

- You can blend baby food, soups, sauces, milk shakes and mayonnaise.

For beaker blending (if supplied) :

- Don't fill the beaker above 500ml
- Hold the beaker steady, then stick blender shaft into the beaker and press the switch button.

FOR SAUCEPAN BLENDING:

- Take the pan off the heat and let it cool slightly. Otherwise your hand blender could overheat.
1. Fit the power handle inside the blender shaft, turn and lock
 2. Plug in. To avoid splashing, place the blade in the food before switching on.
 3. Hold the beaker steady. Then press either speed button (use speed 1 for slower blending and to reduce splashing).
 - Don't let liquid get above the join between the power handle and blender shaft.
 - Move the blade through the food and use a stable action.
 - If your blender gets blocked, unplug immediately
 4. after use, unplug and dismantle.

To use the chopper (if supplied)

- You can chop meat, beef, cheese, vegetables, herbs, bread, biscuits and nuts.
 - Don't chop hard foods such as coffee beans, ice cubes, spices or chocolate. You'll damage the blade.
1. Remove any bones and cut food into 1-2cm (1/2-1") cubes.
 2. Fit the chopper blade over the pin in the bowl ⑨.

3. Add your food.
4. Fit the chopper cover, turn and lock
5. Fit the power handle steady, turn and lock.
6. Plug in. Hold the bowl steady. Then press speed 2.
7. After use, unplug and dismantle.

Processing guide

Food	Maximum Amount	Approx. time (in seconds)
Herbs	20g	10-30
Meat (beef)	300g	10
Nuts	200g	30
Cheese	150g	30
Bread	1 slice	20
Hardboiled Eggs	2	5
Onions	100g (3.5oz)	10

To use the whisk (if supplied)

- You can whip light ingredients such as egg whites, cream, instant desserts, and eggs and sugar for whisked sponges.
- Don't whisk heavier mixtures such as margarine and sugar. You'll damage the whisk.

Processing guide

Food	Maximum Amount	Approx. time (in seconds)
eggs	4 egg	60S
Cream	200	25S

1. Push the beater into the whisk collar ⑤
2. Fit the power handle inside the whisk collar, turn and lock
3. Place your food in a bowl.
- Don't whisk more than 4 egg whites or 400ml (0.75pt) cream.
4. Plug in. To avoid slashing, start on speed 1. Move the whisk clockwise.
- Don't let liquid get above the whisk wires.
5. After use, unplug and dismantle.

CLEANING AND MAINTENANCE

NOTE: Use extreme care when handling the chopping blade. Do not touch the blades with your fingers. The blades are very sharp and can cause injury if touched.

1. Make sure the unit is unplugged from the main power supply.
2. Disconnect the detachable stem from the motor unit.
3. It is much easier to clean the accessories immediately after their use. Wash them in warm, soapy water, rinse and dry well.

4. The bowl must be washed with warm water
5. The body of the hand blender can be cleaned with a damp cloth, and must be wiped off with a dry cloth
6. To remove stubborn spots, wipe the surfaces with a piece of cloth slightly dampened in soapy water or a mild non-abrasive cleaner. Follow with a clean damp cloth.
7. Do not use any abrasive cleaner or material to clean any part of the hand blender, as it will harm the exterior of the hand blender.
8. Always keep the unit/stem in vertical position after cleaning, never keep it in horizontal position

CAUTION: The stick blender motor unit and chopper lid with gear should never be submerged in water or held under a running tap. To clean, simply wipe with a damp cloth

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.