

AROMA DIFFUSER

INSTRUCTION MANUAL

Please read the instructions carefully before use.




SAFETY PRECAUTION

- Use only the voltage specified on the rating plate on the product.
- The product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Children should not play with the product. Cleaning and user maintenance should not be made by children without supervision.
- Children of less than 3 years should be kept away unless supervised and do not play with the product.
- Do not cover or restrict air flow on the product during operation as it may overheat and become a risk of fire.
- Do not place product in direct sunlight, next to a radiator or by an open fire.
- Do not insert foreign objects in any ventilation or exhaust opening as this may cause an electric shock, fire or damage to the product.
- Do not operate the product with a damaged cord, plug or if the product malfunctions or has been dropped or damaged in any way. Return to a qualified electrical person for service or repair. Improper repairs may place the user at risk of harm.
- The product contains no user serviceable parts.
- This product is intended for household use only.
- Used the product as described in this instruction manual. Any other use is not recommended by the retailer and may cause fire, electric shock or injury.
- The most common cause of overheating is deposits of dust in the product. Ensure these deposits are cleaned/removed regularly by unplugging the appliance and cleaning air vents.
- Do not use abrasive cleaning products on this item. Clean with a damp cloth. Always remove plug from the mains supply before filling and cleaning.
- Always operate on a flat, stable surface. Do not place on carpet or cushions.
- Always keep the product upright to avoid leakage.
- The use of an extension cord with this product is not recommended.
- Do not remove plug from power socket until the product has been switched off.
- Do not pull power cord. Always grip plug to remove from socket.
- Always unplug product when not in use and when filling and cleaning.
- Do not allow cord to come in contact with heat or sharp edges.
- Do not run cord under carpets, throws, rugs or runners. Arrange the cord *so that* it cannot be tripped over.
- Do not twist/kink or wrap the cord as this may cause the insulation to weaken or split.
- The product must not be placed below a socket outlet.

- Do not use the product outdoors or on wet surfaces. Avoid spilling liquid on the product.
- Do not use the product in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not immerse the product in water or any other liquid.
- For hygiene season, always empty remaining water in the tank. Wipe clean before filling with fresh clean water. Essential oil used may cause discolouration. Wipe immediately if spilled.
- Refill water with a jug. Do not fill directly under the water tap.
- Do not overfill the water tank.
- Do not use the product directly in front of furniture, fabric or the walls.
- The product can only be used continuously for a maximum of 4 hours. It should be off for 1 hour before using again.
- Use only clean and fresh water.
- Do not move the product when in operation.
- Do not touch the product with wet hands.
- Keeps away from children and pets.

Scented oils – Do not use on the skin. Keep out of reach of children. Avoid contact with eyes. Store in a cool dry place and use within 1 year of opening.

PRODUCT STRUCTURE & PARTS

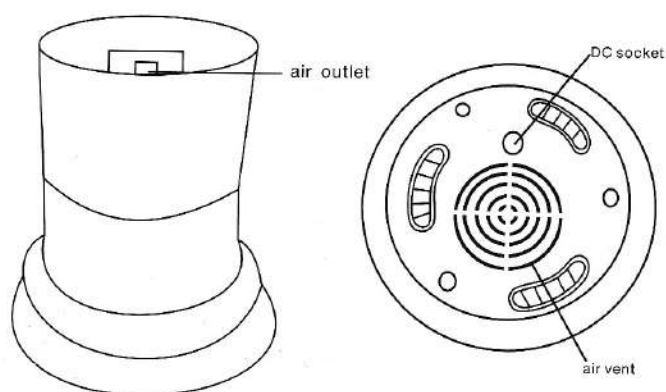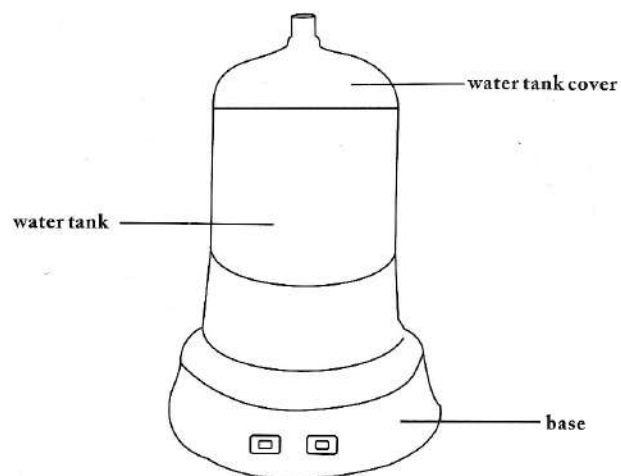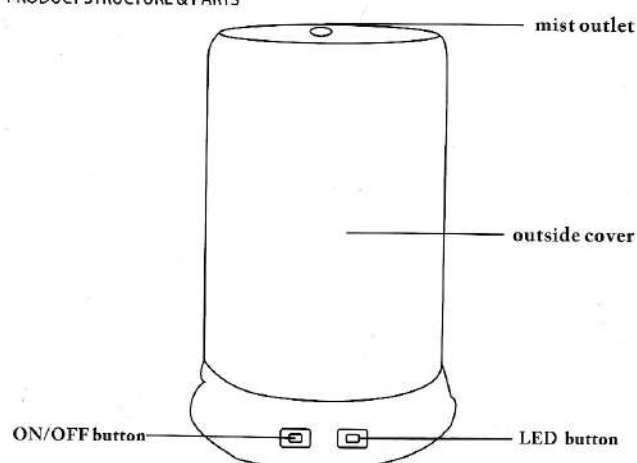

Instructions For Use

1. Place the diffuser on a flat, stable surface and remove the main cover and then remove the water tank.
2. Take out the cover and fill with water in water tank. Do not fill more than 100ml and use only room temperature water.
3. Add a few drops of essential oils into the water tank (The dosage is about 2 drops of oil per 100ml water).
4. Connect the AC adaptor to the DC socket and plug into a mains outlet.
5. Press the on/off button to turn the diffuser on/off:
 - Press once and it will work continuously.
 - Press twice and mist will operate for 30 seconds and suspend for 30 seconds.
 - Press 3 times and it will turn off.
6. LED button has 4 functions:
 - Press once for colour change.
 - Press twice and LED will stay on one colour. Then press again, you can choose the colour you like.
 - Press for 3 seconds LED will turn off.
 - Press 17 times and the diffuser will turn off.
7. The diffuser will automatically turn off when the water level is too low. Before refilling the water tank, always unplug the power supplier first.

ATTENTIONS & NOTES

- This diffuser operates maximum up to 4 hours continuously.
- It is normal that the mist produced varies in intensity.
- The types of water used, the temperature and win direction will affect the mist produced.
- The aroma diffuser can not operate without water.

ATTENTION TO LEAKAGE

If the diffuser overturn when in use, please handle as follow:

1. Turn off the power supply, and open the main cover.
 2. Drain off any water still left in the water tank.
 3. Invert the diffuser and shake gently to remove any water which may still left in the diffuser.
- Place the diffuser in open air for 24 hours before using again.

MAINTENANCE METHOD

Generally maintenance needed once every 5-6 times or 3-5 days of usage, maintenance done must be according to the following procedure.

1. Turn the power supply off, and remove the main cover.
2. When there is water left in the water tank, tilt the diffuser towards drainage side to drain out the water.
3. Clean all parts with a damp soft cloth that was soaked in the warm water with some kitchen detergent added. Use cotton swap to clean the stains present on the corners of the water tank.
4. Do not use alcohol for cleaning. It may damage the diffuser.

Attention: Use only normal kitchen detergent.

TROUBLESHOOTING

When the diffuser does not work properly, please refer the following:

Possible caused of faults and remedies to be taken before contacting your supplier for serving:	
Can not turn on or turn off instantly after pressing the switch	Check the water level in the water tank. --Fill the water tank if no water or water level too low Check AC adaptor is connected properly. --Disconnect and reconnect the DC plug, turn on the power supply.
No mist or not enough mist is produced	Check the water level in water tank. --Fill water if level is too low or pour away some water if the level exceeds 100ml. Check if the oscillator is stained or too dirty. --Clean the tank and the oscillator plate. Check if there is dusts accumulated at the air vent below the base. --If the air vent below the base is covered with dust, the air flow will be weak, without enough flow, the mist can not be produced.
Water leakage	Check if the main cover is properly fastened. --Reinstall the main cover. Check the environment temperature. --If the temperature is too high or too low, water droplets may be formed near the outlet of the mist.

SPECIFICATION:

Power supply: (Input): AC100-240V 50/60Hz (Output): DC24V

Rated power: 12W

Water tank capacity: 100ml

Body material: PP

Outside cover material: glass

Accessories: adapter, instruction manual