

SAFETY PRECAUTIONS

2

 
Please read carefully the following safety precautions before using this unit.
The safety precautions listed below are intended to prevent you and others from injury or to prevent damage to the product.

General product safety

1. Please keep the unit unreachable for children and babies, power cord become wrapped around child neck will mistakenly lead to suffocation and death. This product is designed for in-door and dry location use only.
2. Please use certified power adaptor for this unit.
3. Never dismantle or repair the unit. No serviceable part inside.
4. If the unit begins to smoke, make a smell, or have any abnormal situation, please stop using it immediately. If the supplied adaptor cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. Do not handle device with wet hands.
6. Do not cut, or modify the adaptor cord or put any weight on the adaptor cord. Otherwise it may cause an electric shock or fire.
7. Do not allow liquids or other things enter the unit. Otherwise it may cause damage to the unit.
8. Please unplug the unit when not use.
9. Please place the device in a safe place where others will not be tripped by the power cord or it may cause injury or damage to the unit.
10. Avoid using the unit at the following locations:
Direct sunlight, high temperature or wet, dusty place.
11. Keep away from electronic equipment: such as TV, Audio equipment.


PRODUCT DESCRIPTIONS

3

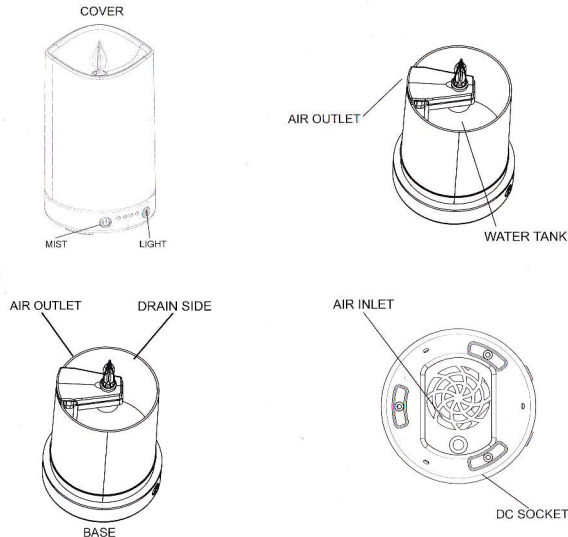

OPERATION

 4

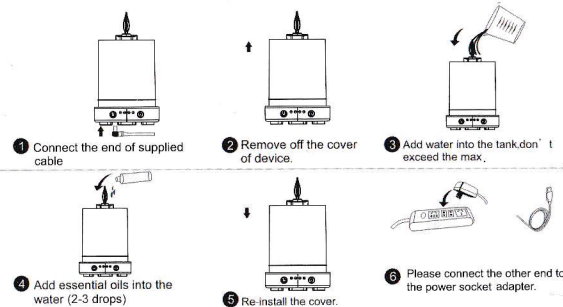


7 Power button:

Press once, mist and light will be on, the unit will continue working for half hour, and automatically off when water level is low. Press twice, mist and light will be on, the unit will continue working for 1 hour, and automatically off when water level is low. Press thrice, mist and light will be on, the unit will continue working for 2 hours, and automatically off when water level is low. Press quartic, mist and light will be on, the unit will continuously work and automatically off when water level is low. Long press for 2 seconds, light and mist will be off.

8 Light button:

 Press once, LED mood light will be on with 7 colors in a loop.
Press twice, pause on the current color.
Press thrice, switch to single color and cycle until color off.
Long press for 2 seconds, LED mood light will be off.



WARM TIPS

5

 
1. Please use a cup to fill water. Do not fill over the max. line to avoid the unit damaged.
2. Use only pure essential oils soluble into water for use in Diffuser device. Please clean the unit as per the maintenance instructions before changing a new type of essential oil.
3. Different humidity environment and temperature will affect the mist density.
4. Do not place device near wall or furniture as direct mist may cause damage.
5. After using please pour out remaining water completely out of tank and store it at dry place.
6. If there is low of water in the tank, even though the power is connected the device will shut off automatically.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
8. Children should be supervised to ensure that they do not play with the appliance.

CARE AND CLEANING

6

After using 5-6 times or 3-5 days, be sure to clean the device:

1. Unplug the device from power source before cleaning.
2. Pour out any remaining water completely in the tank. Do not pour out water from the air outlet side. (Fig. 1)
3. Put a small amount of diluted soap and water. Then use a clean cloth dip in the water and wipe up the unit gently. Clean all dirt residue.
4. Never use alcohol during maintenance. Or it may cause product damage and erase various wording on the product.

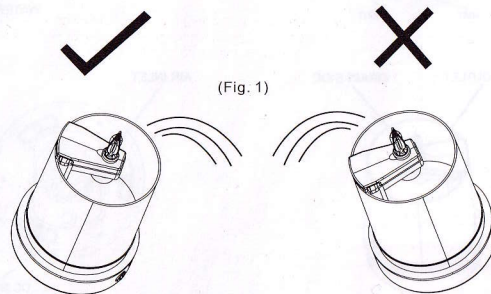

(Fig. 1)

Aroma Diffuser

User Manual

