

#### Dear customer

Thank you for selecting

The series of this Rechargeable trolley speaker with good sounds performance, more function for selecting and easy operating. This product supports a variety of audio input and switching, such as USB, SD/TF card (built-in decoder supports MP3/WMA and other formats), Bluetooth, FM radio, wireless microphone, Line-in, AUX input, microphone/guitar input Etc. (Some models may only support some of the functions listed above, the specific functions must be subject to the actual product). Meet all various demand of user, will be a good choice for entertainment, For more safety and full use of this product, please read this Manual carefully before using. Please keep this manual for reference.

In order to bring better using experience, please keep the accessories of this product.

Safety Warning

1. Please use within the specified power range (refer the back plate) ,otherwise will damage the product .

2. Avoid tread, press, drag, fold the power cable and other cable.

- There are high-voltage parts inside, please do not disassemble the product without authorization, to avoid the risk of electric shock.
- 4. Pay more attention to the use environment, do not playing in the high temperature, high voltage, moist dusty environment.
- Turn off the product during the thunderstorms, unplug from the power socket, disconnect to other products.

6. Avoid the crash with tough object, drop from the height and tumble.

- 7. Do not touch the back plate and other heat dissipation parts when the product working.
- 8. Using in the well ventilated area, do not cover or put other items on the top of product, and keep proper distance for the product dissipate heat.
- Forbidden to place liquid on the product to prevent the product from being tilted/leaked or the risk of electric shock.
- 10. This product is not suitable for children to operate, please do not settle this product in a place where children can reach.

11. This product has a built-in battery. Do not overcharge for a long time.

12. Infrequently used, please charge it regularly to maintain the built-in battery performance and workinging life.



Warning Mark: high-voltage inside, bewareof electric shock



Warning Mark: This product uses a power plug as a disconnection device. It should be easily accessible during use.



This product apply to safeuse in tropical and non-tropical climates

 


This product is only support to be used below 2000 meters elevation, there may be potential safety hazards when used above 2000 meters elevation

### **Operating instructions**

The accessories or marks are installed/printed on the product (all or part, please refer to the actual product), which respectively support the corresponding functions (if have), please follow the instructions to use as below.

# Power input



#### 二、Storage media


This product supports storage media such as U disk / SD card / TF card



## **≡.External input / output**

(3.5mm) line-in audio input jack / RCA lotus input jack (L is left, R is right, corresponding to the white and red of the RCA line)
(6mm) Audio input jack for microphone or guitar



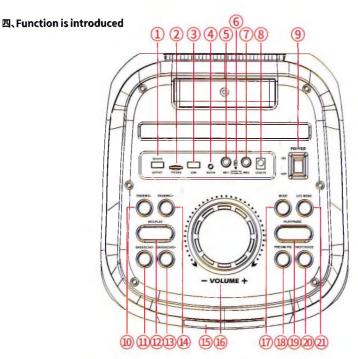

1.5V 1A OUTPUT	2、TF CARD	3、USB	4、AUX IN
5、MIC 1	6、CHARGE	7、MIC 2	8, DC 9V IN
9、POWER	10.TREB/MIC-	11、BASS/ECH-	12、REC/PLAY
13、BASS/ECHO+	14、TREB/MIC+	15, MP3 DISPLAY	16.VOLUME
17、MODE	18, PREV/M.PRI	19, PLAY/PAUSE	20. NEXT/VOICE
21、LED MODE			

#### **Function of remote**

Some products in this series are equipped with remote control, the functions as belows:Note: Some models may have different remote controls. Please refer to the actual comparison operation

- U-Power button, supported models can be turned on and off by this button;
- অ Mute button, quickly turn off the volume with one click, press again to restore the original volume;
- 0-9-Number buttons, select songs when playing on storage media such as USB/SD/TF card;

MODE-Mode button, select audio input/Wireless/radio etc functions; U/SD-When using U disk and memory card at the same time, choose to play U disk or memory card audio;

►II-Play / Pause (previous channel/next channel switch in radio function);

I → Previous/Next (Switch to previous/next channel in radio function);

VOL-Volume up;

VOL+-Volume down;

EQ-Preset EQ effect switch;

REPE(RPT)-REPE(RPT)-Repeat;



### Common issues and solutions:

phenomenon	reason	solution	
	Power switch is not turned on	Turn on the power switch	
No power	Built-in battery runs out	Charge the product via adapter or power cable	
	The plug is not plugged in properly or the power cable is defective	Reinsert or replace the power cable	
	Power outlet is not electric field	Replace the power outlet	
	Other reason	Contact after-sales dept.	
No sounds	Volume is turn off or mute mode	Adjust the volume or turn off Mute mode	
	Source media/input connection selected incorrectly	Select the correct audio media/ input connection	
	Audio media/input connection selected audio file	Reinsert media with supported format	
	Other reason	Contact after-sales service	
Microphone no sounds	Microphone volume is off or too low	Adjust microphone volume	
	Poor contact	Reinsert o replace the Microphone jack	
	Other reason	Contact after-sales service	
Distortion of sounds	Poor audio signal or volume too large	Adjust audio files / signals or reduce volume	
	Battery running low	Full charged before using	
Squeal from Microphone	The microphone volume is too loud or too close to the speakers	Adjust microphone volume and keep properly distance from speakers	

# Tips:

To protect your hearing from damage and avoid affecting others, recommends that do not use this product at high volume for long time.

In order to bring better using experience, please keep the accessories of this product.