

12W - 230V - 50Hz



To avoid damage or danger by improper use, this instruction manual should be followed and carefully kept. If you give the appliance to another person, also supply them with the instruction manual.

SAFETY IN USE

- This foot warmer can only be used with the supplied transformer plug / adaptor
- This foot warmer has a built in automatic cut off safety feature, when the temperature exceeds 75 degrees it will automatically stop working. If this happens then please allow for the foot warmer to cool down completely before using again.
- Do not operate the unit with wet hands.
- Do not carry this appliance by the supplied cord as a handle.
- Do not immerse the unit in water.
- Keep cord away from heated surfaces.
- ⚠ **Caution! An electric appliance is no toy!** Never leave the appliance unsupervised when in use. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Explain to your children all risks which can be caused by electric current:
 - Danger caused by hot parts of the appliance
 - Danger caused by electric current (electric shock, shortcircuit etc.)
- Unplug the cord from the mains:
 - when malfunction during use
 - before cleaning
 - after each use and for storing.
- Do not operate any appliance with a damaged cord, if the appliance malfunctions or has been dropped or damaged in any manner. Ask a (*) competent qualified electrician to

check and repair it.

- Should the cord be damaged, it must be replaced by a competent qualified electrician(*) to avoid any danger. All repairs should be made by a competent qualified electrician(*).
- Do not leave packaging components (plastic bags, cardboard, polystyrene, etc.) within the reach of children, as it could be dangerous.
- This product is intended for household use only, is not suitable for professional or medical use. Do not use outdoors.
- If improper use or misuse or improper repair no liability by supplier will be accepted for damages. In this case supplier will give no guarantee for the unit.

(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to such electrician

HEALTH CAUTION

- If you have any concerns regarding your health, consult your doctor before using this product.
- Individuals with pacemakers should not use this product.
- If you experience pain in a muscle or joint for a prolonged period of time, discontinue use and consult your doctor. Persistent pain could be a symptom of a more serious condition.

HOW TO USE AND TIPS

This foot warmer provides a gentle and invigorating massage and improves blood flow. The incorporated heating warms up your feet in a pleasant manner while massaging. The heat up function may also be used without the massage just for keeping warm. Place the appliance on the floor in front of your chair. Sit down, relax and place your feet inside the unit. Use is recommended with the inner fleece inserted only. The function may now be started by means of the remote control unit. Two massage intensities may be selected and the heat function may be added according to your preference. Please pay attention to the aforesaid hints regarding safety and health.

CLEANING AND CARE

- ⚠ **Caution!** Before storing and cleaning, switch the appliance off and remove the plug from the mains

TO STORE: Place unit in a dry and safe place. Avoid contact with sharp edges of pointed objects which might cut or puncture the fabric. Do not wrap power cord around the unit. Do not hang the unit by power cord.

TO CLEAN:

- Remove the fleece lining from the foot massager. The inner lining is washable..
- **WARNING: NEVER MACHINE WASH THE OUTER LINING.**
- Machine wash warm with a mild detergent. Use non-chlorine bleach only when necessary. Tumble dry on low.

- Do not dry clean.
- To clean the outer lining, make sure the massager is unplugged .Wipe the outer surface with a damp clean cloth. Do not use any strong chemical cleaners.

TECHNICAL DATA

Adaptor: Input 230V ~ 50 Hz, Output 12 V ~ 800 mA 12W, Protection class: II

Foot warmer: Input 12V ~ 800 mA

This appliance is tested according to GS and is built to CE regulations.

DISPOSAL

Please respect the environment!

Dispose the packaging according to the local garbage regulations.

Dispose paper and carton separately from plastic bags into the corresponding containers

Dispose the appliance at the end of its lifespan according to environmental considerations.

(Special waste collection WEEE of your local waste management authorities)

IMPORTANT INFORMATION

The guarantee period for this appliance is 12 months. The guarantee starts from the date of purchase. In case of malfunction please contact the retailer you purchased the item from.

Please make sure you keep the original receipt of purchase as you will need to provide this as proof of your purchase.

Within the guarantee period we repair defects of the appliance, which are based on material or manufacturing faults, in our choice by repair or exchange. These obligations do not extend the period of guarantee. No claim on a new period of guarantee results from it.

