


X7

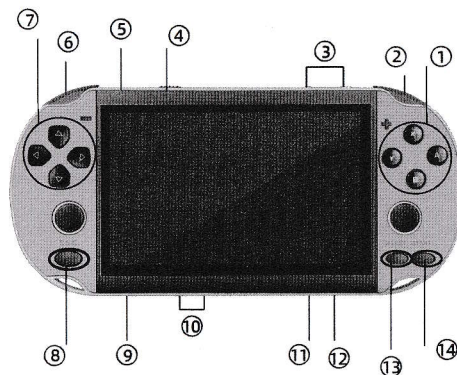

- 1 function keys  
Y (Game Function)  
X (Functional Menu)  
A (Determine Key)  
B (exit key)
- 2 R bond
- 3 volume key
- 4 lock keys (boot keys)  
(please open the lock keys for charging)
- 5 Shutdown key save key  
(push the lock key when boot key)
- 6 L bond
- 7 steering wheel
- 8 game exit key
- 9 Charging interface and Data Interface
- 10 headphone interface (TV-OUT interface)
- 11 reset key  
(the machine can be pressed when it crashes)
- 12 TF card slot
- 13 SELECT key (coin key)
- 14 START bond

Three boot-up methods:  
The first kind: push (lock key) start.  
The second kind: the lock key is opened,  
you can press (shutdown key) not to turn on.  
Third kind: Push the lock key and charge the machine.

#### Four Boot-Up Methods

1. (9) The boot button is pushed to ON or left to boot.
2. The boot button is ON or on the left. Press (13) the boot button and hold (3-5 seconds) the boot button.
3. No operation, please charge the machine (push the lock key to ON)
4. Charge the power on, show the pro, no unlock key

#### Game manipulation

1. Ordinary games: (double-click B - press START to start)
2. Arcade Game: (Double-click the B key - press the coin (L or R key) - press the START start key).

#### Pre-use preparation

- ◀/▶ Key: Right or left key, short press to switch or adjust the value between different options:  
long press to fast forward or fast backward.
- ▼/▲Key: Up and down keys, the desktop menu up and down to choose the use and control of the game characters up and down direction to use.

START key game start confirmation / pause key. ESC game exit key

#### Key function

B	Confirmation key: Enter the game or start (control the characters to punch/shoot/jump, different game functions are different)
A	Exit key: (Control the character to punch/shoot/jump. Different game functions are different)
Y	Game Function Key: (Controls the character to punch/shoot/jump. Different game functions are different)
X	Game Function Key: (Controls the character to punch/shoot/jump. Different game functions are different)

Because of the support for multi-format handheld game machines,  
there is no fixed key corresponding to which operation.  
Users need to press every key to test  
(games are different, operations are different, users need to discover the new continent)

#### Language settings

If you see other languages on boot, please choose "setting - language - English".  
Then press the "B" key to confirm, after the language is set, the shutdown must be long pressed (13) to shut down the boot key.

 
#### How to archive games

When playing the game, press SELECT to exit the game, select "save progress" in the menu,  
press O to determine, a game saves up to six game progress.

If you want to follow the previous game schedule, after entering the game,  
select "load schedule" to do so.

A3

(4.3 inch TFT eye protection screen  
(normal version does not support this operation))

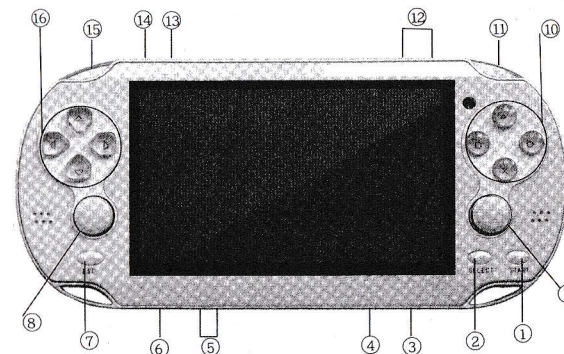

1. START (Short Press - Game Start)
2. SELECT Key Coin Key
3. TF chuck (maximum support 32G)
4. Reset key (you can click when the screen is down and restarted)
5. Headphone Interface TV-UOT Interface
6. Charging Interface Data Interface
7. ESC game exit key
8. Main direction of steering wheel operation
9. Synchronization 10
10. O key home page or game (confirm key) double-click or click  
X-key home page (exit key) double-click or click  
The other two are function keys.
11. R bond
12. + - Volume key
13. (Boot button) Lock button (Charge unlock button pushed to ON)
14. Shutdown key save key (long press-shutdown)
15. L bond
16. Synchronization 8

#### Four Boot-Up Methods

1. (13) The boot button is pushed to ON or left to boot.
2. The boot button is on the left or ON, press (14) the boot button and hold (3-5 seconds) the boot button.
3. No operation, please charge the machine (push the lock key to ON)
4. Charge the power on, show the pro, no unlock key

#### Game manipulation

1. General games: (double-click O - press START to start)
2. Arcade Game: (Double-click O - press SELECT to coin - press START to start)

#### Pre-use preparation

- ◀/▶ Key: Right or left key, short press to switch or adjust the value between different options: long press to fast forward or fast backward.
- ▽/▲Key: Up and down keys, the desktop menu up and down to choose the use and control of the game characters up and down direction to use.

START key: game start confirmation / pause key. ESC game exit key

#### Key function

O	Confirmation key: Enter the game or start (control the characters to punch/shoot/jump, different game functions are different)
X	Exit key: (Control the character to punch/shoot/jump. Different game functions are different)
□	Game Function Key: (Controls the character to punch/shoot/jump. Different game functions are different)
△	Game Function Key: (Controls the character to punch/shoot/jump. Different game functions are different)

Because of the support for multi-format handheld game machines, there is no fixed key corresponding to which operation.

Users need to press every key to test

(games are different, operations are different, users need to discover the new continent)

#### Language settings

If you see other languages on boot, please choose "setting - language - English".

Then press the "O" key to confirm, after the language is set, the shutdown must be long pressed (14) to shut down the boot key.

 
#### How to archive games

When playing the game, press SELECT to exit the game, select "save progress" in the menu, press O to determine, a game saves up to six game progress.

If you want to follow the previous game schedule, after entering the game, select "load schedule" to do so.

## V3000

(4.3 inch TFT eye shield). (Normal version does not support this operation)

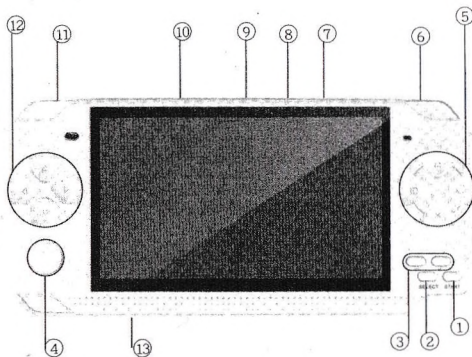

1. START Keyboard Length Press-Shutdown (Save) Short Press-Game Start Key
2. SELECT key game exit key
3. + - Volume key
4. Rocker operating steering wheel
5. O-key home page or game (confirm key) double-click or click
6. The coin key or no function (depending on the object, the version is different and the operation is different)
7. (Boot button) Lock button (unlock button for charging)
8. Headphone Interface TV-UOT Interface
9. Headphone interface
10. Changing Interface Data Interface
11. The coin key or no function (depending on the object, the version is different and the operation is different)
12. Main direction of steering wheel operation
13. TF chuck (maximum support 32G)

#### Four Boot-Up Methods

1. The unlock key is pushed to the right or ON.
2. The unlock key is on the right or on, press START key to hold (3-5 seconds) - boot
3. No operation, please charge the machine.
4. Charge the power on, show the pro, no unlock key

#### Game manipulation

1. General games: (double-click O - press START to start)
2. Arcade Game: (Double-click O - Coin - start by pressing START)

#### Pre-use preparation

- ◀/▶ Key: Right or left key, short press to switch or adjust the value between different options: long press to fast forward or fast backward.
- ▽/▲Key: Up and down keys, the desktop menu up and down to choose the use and control of the game characters up and down direction to use.

START Jian: Game start confirmation/pause key. SELECT key game console exit key

#### Key function

O	Confirmation key: Enter the game or start (control the characters to punch/shoot/jump, different game functions are different)
X	Exit key: (Control the character to punch/shoot/jump. Different game functions are different)
□	Game Function Key: (Controls the character to punch/shoot/jump. Different game functions are different)
△	Game Function Key: (Controls the character to punch/shoot/jump. Different game functions are different)

Because of the support for multi-format handheld game machines, there is no fixed key corresponding to which operation.

Users need to press every key to test

(games are different, operations are different, users need to discover the new continent)

#### Language settings

If you see other languages on boot, please choose "setting - language - English".

Then press the "O" key to confirm, after the language is set, the shutdown must be long pressed "START" key to shut down.

#### How to archive games

When playing the game, press SELECT to exit the game, select "save progress" in the menu, press O to determine, a game saves up to six game progress.

If you want to follow the previous game schedule, after entering the game, select "load schedule" to do so.